

SNAP PAC BRAINS USER'S GUIDE

SNAP-PAC-EB1 (Obsolete)
SNAP-PAC-EB2 (Obsolete)
SNAP-PAC-EB1-FM (Obsolete)
SNAP-PAC-EB2-FM (Obsolete)
SNAP-PAC-SB1 (Obsolete)
SNAP-PAC-SB2 (Obsolete)

Form 1690-230202—February 2023

OPTO 22
Your Edge in Automation.™

43044 Business Park Drive • Temecula • CA 92590-3614
Phone: 800-321-OPTO (6786) or 951-695-3000
Fax: 800-832-OPTO (6786) or 951-695-2712
www.opto22.com

Product Support Services
800-TEK-OPTO (835-6786) or 951-695-3080
Fax: 951-695-3017
Email: support@opto22.com
Web: support.opto22.com

SNAP PAC Brains User's Guide
Form 1690-230202—February 2023

Copyright © 2007–2023 Opto 22.

All rights reserved.

Printed in the United States of America.

The information in this manual has been checked carefully and is believed to be accurate; however, Opto 22 assumes no responsibility for possible inaccuracies or omissions. Specifications are subject to change without notice.

Opto 22 warrants all of its products to be free from defects in material or workmanship for 30 months from the manufacturing date code. This warranty is limited to the original cost of the unit only and does not cover installation, labor, or any other contingent costs. Opto 22 I/O modules and solid-state relays with date codes of 1/96 or newer are guaranteed for life. This lifetime warranty excludes reed relay modules, *groov* and SNAP serial communication modules, SNAP PID modules, and modules that contain mechanical contacts or switches. Opto 22 does not warrant any product, components, or parts not manufactured by Opto 22; for these items, the warranty from the original manufacturer applies. Refer to Opto 22 form 1042 for complete warranty information.

Wired+Wireless controllers and brains are licensed under one or more of the following patents: U.S. Patent No(s). 5282222, RE37802, 6963617; Canadian Patent No. 2064975; European Patent No. 1142245; French Patent No. 1142245; British Patent No. 1142245; Japanese Patent No. 2002535925A; German Patent No. 60011224.

Opto 22 FactoryFloor, *groov*, *groov* EPIC, *groov* RIO, mobile made simple, The Edge of Automation, Optomux, and Pamux are registered trademarks of Opto 22. Generation 4, *groov* Server, ioControl, ioDisplay, ioManager, ioProject, ioUtilities, *mistic*, Nvio, Nvio.net Web Portal, OptoConnect, OptoControl, OptoDataLink, OptoDisplay, OptoEMU, OptoEMU Sensor, OptoEMU Server, OptoOPCServer, OptoScript, OptoServer, OptoTerminal, OptoUtilities, PAC Control, PAC Display, PAC Manager, PAC Project, PAC Project Basic, PAC Project Professional, SNAP Ethernet I/O, SNAP I/O, SNAP OEM I/O, SNAP PAC System, SNAP Simple I/O, SNAP Ultimate I/O, and Wired+Wireless are trademarks of Opto 22.

ActiveX, JScript, Microsoft, MS-DOS, VBScript, Visual Basic, Visual C++, Windows, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries. Linux is a registered trademark of Linus Torvalds. ARCNET is a registered trademark of Datapoint Corporation. Modbus is a registered trademark of Schneider Electric, licensed to the Modbus Organization, Inc. Wiegand is a registered trademark of Sensor Engineering Corporation. Allen-Bradley, CompactLogix, ControlLogix, MicroLogix, SLC, and RSLogix are either registered trademarks or trademarks of Rockwell Automation. CIP and EtherNet/IP are trademarks of ODVA. Raspberry Pi is a trademark of the Raspberry Pi Foundation. The registered trademark Ignition by Inductive Automation® is owned by Inductive Automation and is registered in the United States and may be pending or registered in other countries. CODESYS® is a registered trademark of 3S-Smart Software Solutions GmbH.

groov includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org>)

All other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

Opto 22
Your Edge in Automation.

Table of Contents

Chapter 1: Introduction	1
About SNAP PAC Brains	1
I/O Processing	1
Communications	2
PAC Project Software Suite	2
Other Communication Methods	2
Custom Software	3
About this Guide	3
Other Documents You May Need	3
For Help	4
Chapter 2: Installing a SNAP PAC Brain	5
What You Will Need	5
Installing Hardware	5
Installing Modules on the Rack	5
Removing a Module	7
Installing the Brain	7
Setting Up Ethernet Networking	7
Setting Up Serial Networking	8
Guidelines for Grounding SNAP PAC Brains and Controllers	9
Serial Wiring Diagrams	10
What's Next?	13
Chapter 3: System Architecture	15
Communication Options	15
SNAP PAC Ethernet Brains (Obsolete)	15
Simultaneous Communication	16
SNAP PAC Serial Brains (Obsolete)	16
Accessing SNAP PAC Brains Over the Internet	17
Choosing Communication Methods	18
System Architecture	19
SNAP PAC Brains as Part of a Distributed SNAP PAC System	19
SNAP PAC Ethernet Brain in an Allen-Bradley Logix System	20
SNAP PAC Ethernet Brain as an Independent I/O Processor	21
SNAP PAC Serial Brain as an Independent I/O Processor	22

Ethernet Networking (Ethernet Brains Only)	23
Connecting Directly to a PC or Controller	23
Attaching to an Existing Ethernet Network	23
Developing an Independent Ethernet Network	23
Using SNAP PAC Ethernet Brain Network Interfaces	24
Correct Connections for Daisy-Chaining	25
Incorrect Network Connections	25
Specifications	26
LEDs and Network Interfaces—Ethernet Brains (Obsolete)	26
LEDs and Network Interfaces—Serial Brains (Obsolete)	27
SNAP PAC Brain Comparison Chart	27
Feature Descriptions	29
Chapter 4: Maintenance and Troubleshooting	33
Introduction	33
Maintaining the SNAP PAC Brain	33
Backup Battery	33
Changing an Ethernet Brain's IP Address	34
Resetting a SNAP PAC Brain	34
Loading New Firmware	34
Setting Time and Date	34
Blink Codes	35
Self-Test LED Sequence at Startup	35
Normal LED Behavior: MS and NS LEDs	35
STAT LED—Green	36
STAT LED—Orange	36
STAT LED—Red and Green	36
STAT LED—Red	36
Getting Device and Firmware Information	37
Troubleshooting SNAP PAC Brains	39
Communicating with an EB Brain	39
Pinging the Brain	40
Accessing the Ethernet Brain with PAC Manager	40
Solving Ethernet Network Problems	41
Communicating with an SB Brain	42
Timeout Errors when Communicating via a Controller	43
Turning on Communication Error Blink Codes (Serial Brain)	43
Additional Troubleshooting Tools	45
Making Sure the Brain is in Normal Mode	45
TCP Settings (Ethernet Brains)	45
Appendix A: Serial Cables and Addressing	47
Serial Cables	47
Address Table	47
Index	49

1: Introduction

ABOUT SNAP PAC BRAINS

NOTE: Due to the unavailability of essential parts, all SNAP PAC brains (EB-series) are obsolete and no longer available. Instead of Ethernet-based brains, use a SNAP-PAC-R1 controller/brain; it has all the same features plus additional power (and programmability, if you need it). For serial brain options, contact Opto 22 Product Support..

SNAP PAC brains are powerful and versatile I/O and network communications processors for your SNAP PAC System™. These brains are designed primarily to work in distributed systems controlled by a SNAP PAC programmable automation controller. SNAP PAC Ethernet brains can also be used as intelligent remote I/O in a groov EPIC system or an Allen-Bradley® Logix-based PLC system.

All SNAP PAC brains provide local intelligence that frees the controller for supervisory tasks. SNAP PAC brains can also be used independently for standalone I/O processing and communication.

SNAP PAC brains use either Ethernet networks or serial networks.

- The **Ethernet Brains—SNAP-PAC-EB1** and **SNAP-PAC-EB2**—share the same functions and features except that the SNAP-PAC-EB1 provides high-speed digital functions. The SNAP-PAC-EB2 does not offer high-speed digital. **SNAP-PAC-EB1-FM** and **SNAP-PAC-EB2-FM** are Factory Mutual-approved versions of these two brains (also obsolete)
- The two **Serial Brains—SNAP-PAC-SB1** and **SNAP-PAC-SB2**—are like each other in their functions and features except that the SNAP-PAC-SB1 provides high-speed digital functions. The SNAP-PAC-SB2 does not offer high-speed digital.

Because EB brains and SB brains run on different networks, some of their features differ. For a comparison of brain features, see [page 27](#).

I/O Processing

As an I/O processor, the SNAP PAC brain provides the local intelligence to independently handle functions such as latching, counting, thermocouple linearization, watchdog timers, and PID loop control. These functions continue to work on the brain even if communication with the controller is lost.

Each SNAP PAC brain mounts on a SNAP PAC rack with up to 4, 8, 12, or 16 SNAP I/O™ modules. Each module provides from 1 to 32 I/O points, depending on the module.

SNAP PAC **Ethernet brains** support all SNAP I/O analog, digital, and serial input and output modules available on the Opto 22 website. SNAP PAC **Serial brains** support all analog and digital SNAP I/O modules (including high-density).

All SNAP I/O modules can be mixed on the same mounting rack and placed in any position on the rack, to accommodate the required mix of signals at any location. For more information on mounting racks, see the [SNAP PAC Racks](#) data sheet (form 1684). For more information on I/O modules, visit our website at www.opto22.com.

Communications

In addition to I/O processing, SNAP PAC brains provide communication through a choice of networks:

- **Ethernet—SNAP-PAC-EB1, SNAP-PAC-EB1-FM, SNAP-PAC-EB2, and SNAP-PAC-EB2-FM** brains communicate over a standard 10/100 Mbps Ethernet network. Each brain is equipped with two switched Ethernet network interfaces. Because these interfaces share a single IP address and act just like an Ethernet switch, SNAP PAC brains can be installed in a multi-drop (daisy-chain) configuration, extending the control network without the expense of additional Ethernet network hardware. SNAP PAC brains can also be installed in a star configuration using standard, off-the-shelf Ethernet network components.

NOTE: If you replace a SNAP PAC Ethernet brain with a SNAP PAC R-series controller, be aware that the controller has two independent, not switched, Ethernet interfaces. You can install an R-series brain only in a star configuration, not multi-drop. Contact Opto 22 Product Support ([page 4](#)) with any networking questions.

- **Serial—SNAP-PAC-SB1 and SNAP-PAC-SB2** brains communicate over a standard RS-485 network, either two-wire or four-wire, using a binary protocol. Baud rates from 300 to 230,400 bps are supported. There are 256 possible multidrop addresses.

PAC Project Software Suite

SNAP PAC brains are primarily designed for use with a SNAP PAC programmable automation controller or a *groov* EPIC processor running a control program built with PAC Project™ software. SNAP PAC R-series controllers and *groov* EPIC processors can communicate with Ethernet brains only; SNAP PAC S-series controllers can communicate with both serial and Ethernet brains at the same time. The controller runs a control program, called a *strategy*, which you develop using PAC Project™ software.

The PAC Project Software Suite comes in two forms, Basic and Professional:

- **PAC Project Basic™**, which is included in the purchase of a SNAP PAC controller, consists of control programming, human-machine interface (HMI) creation, and configuration software.
- **PAC Project Professional™** is available for purchase and adds OptoOPCServer™ for OPC communications, OptoDataLink™ for database connectivity, and additional features.

For more information about PAC Project, see the [PAC Project](#) data sheet (form 1699), available on our website, www.opto22.com.

Other Communication Methods

While most customers use the PAC Project software suite for control, monitoring, and data acquisition, SNAP PAC brains can communicate using other several other methods.

Both SB and EB brains can be used as standalone I/O and communications processors for PC-based I/O. SNAP PAC EB brains can also be used as intelligent remote I/O in an Allen-Bradley® RSLogix® PLC system.

SNAP PAC Ethernet brains support communication using multiple protocols running simultaneously over Ethernet. You can communicate with SNAP PAC Ethernet brains using the following tools:

	For	For details, see
EtherNet/IP	Allen-Bradley systems	EtherNet/IP for SNAP PAC Protocol Guide , form 1770
Modbus/TCP	Modbus communication	Modbus/TCP Protocol Guide , form 1678.
SNMP	Network management	Modbus/TCP Protocol Guide , form 1678. PAC Manager User's Guide , form 1704
FTP	The brain's built-in file system	PAC Manager User's Guide , form 1704
SMTP	Email clients	PAC Manager User's Guide , form 1704
OptoMMP	MMP communication	OptoMMP Protocol Guide , form 1465
OptoOPCServer	OPC 2.0-compliant clients	PAC Project Professional and OptoOPCServer on our website at www.opto22.com

SNAP PAC serial brains support communication using OptoMMP, Opto 22's open and documented memory-mapped protocol. For details, see the [OptoMMP Protocol Guide](#) (form 1465).

Custom Software

If you are not using PAC Project and want to develop custom software to communicate with the brain, you can quick start your development process with two free Opto 22 software development kits (SDKs), which you can download from our website at www.opto22.com:

- For Visual Basic® and C++®—the [PAC-DEV-OPTOMMP-CPLUS](#) software development kit (SDK). The SDK supports Microsoft Windows® and Linux, and includes all documentation.
- For Visual Studio® 2010 through 2017—the [PAC-DEV-OPTOMMP-DOTNET](#) SDK for .NET developers. The SDK supports Microsoft's .NET frameworks 4.0 through 4.5, and includes all documentation.

ABOUT THIS GUIDE

This guide shows you how to install and use SNAP PAC brains. This guide assumes that you are already familiar with networking (serial or Ethernet) for the types of brains you'll be using. If you are not familiar with these subjects, we strongly suggest you consult commercially available resources to learn about them before attempting to install or use SNAP PAC brains.

The following sections are included in this user's guide:

Chapter 1: Introduction—information about the guide and how to reach Opto 22 Product Support.

Chapter 2: Installing a SNAP PAC Brain—quick-start steps to get SNAP PAC brains up and running quickly.

Chapter 3: System Architecture—conceptual information on networking and communicating with SNAP PAC brains, and brain specifications.

Chapter 4: Maintenance and Troubleshooting—changing IP addresses, resetting the brain to factory defaults, and upgrading firmware; blink codes and other troubleshooting assistance.

Appendix A: Serial Cables and Addressing—for SNAP PAC serial brains, shows how to set address switches for all possible brain addresses.

Other Documents You May Need

You'll find most of the documentation to build and maintain your control system in the PAC Project folder that's added to your Windows Desktop when you install PAC Project. While using PAC Project applications, online help is available by clicking Help in the menu bar or the Help buttons in dialog boxes, or simply by pressing the F1 key.

Here's a brief list of documents you may find helpful. You can also download other documents, sample files, software utilities, technical notes, integration kits, and much more from the [Opto 22 website](#).

TIP: To easily find documents on our website, search on the form number.

For this information	See this guide	Form #
Assigning IP addresses, loading new firmware, configuring SNAP I/O points and system functions	PAC Manager User's Guide	1704
Designing flowchart-based control programs for the system (requires a SNAP PAC S-series or R-series industrial controller)	PAC Control User's Guide	1700
	PAC Control Command Reference	1701
	PAC Control Commands Quick Reference	1703

For this information	See this guide	Form #
Programming your own applications by using either: <ul style="list-style-type: none"> The OptoMMP protocol for memory-mapped controllers and brains One of the OptoMMP Software Development Kits (SDKs) 	OptoMMP Protocol Guide	1465
Communicating with SNAP PAC brains using OPC*	OptoOPCServer User's Guide	1439
Connecting the SNAP PAC System with databases	OptoDataLink User's Guide	1705
Communicating with I/O units using Modbus/TCP	Modbus/TCP Protocol Guide	1678
Communicating with I/O units using EtherNet/IP	EtherNet/IP for SNAP PAC Protocol Guide	1770

* OptoOPCServer communication with SNAP PAC serial brains requires a SNAP PAC controller.

FOR HELP

If you have problems installing or using SNAP PAC brains and cannot find the help you need in this guide or on our website, contact Opto 22 Product Support.

Phone: 800-TEK-OPTO
(800-835-6786 toll-free in the U.S. and Canada)
951-695-3080
Monday through Friday,
7 a.m. to 5 p.m. Pacific Time

Email: support@opto22.com

Opto 22 website: www.opto22.com

When calling for technical support, you can help us help you *faster* if you provide the following information to the Product Support engineer:

- A screen capture of the Help > About dialog box showing software product and version (available by clicking Help > About in the application's menu bar).
- Opto 22 hardware part numbers or models that you're working with.
- Firmware version:
 - For *groov* EPIC processors and *groov* RIO modules: available in *groov* Manage by clicking Info and Help > About.
 - For SNAP controllers and brains: available in PAC Manager by clicking Tools > Inspect.
- Specific error messages you received.
- Version of your computer's operating system.
- For PAC Control, PAC Display, OptoOPCServer, or PAC Manager, you may be requested to provide additional information, such as log or dump files. You can find these files in a support files sub-folder:
 - On your Windows Desktop, double-click the PAC Project 10.4 folder.
 - Double-click Support Files.
 - Double-click on the appropriate shortcut to open the sub-folder containing the requested files.

Note: *PAC Control, PAC Display, OptoOPCServer, and PAC Manager create appropriate sub-folders when they create diagnostic log or dump files. If they have not created these files, the sub-folder may not exist; in this case, the shortcut will not work.*

2: Installing a SNAP PAC Brain

If you already know how you will use the SNAP PAC brain and want to get it running quickly, follow the sections in this chapter.

To learn about communication options and networking, start on [page 15](#). Specifications are listed on [page 26](#).

WHAT YOU WILL NEED

You'll need the following items to install a SNAP PAC brain:

- A PC running Microsoft® Windows® 10 Professional (32-bit or 64-bit) or Windows 11
- **For an Ethernet connection**, the PC also needs a 10/100 MB Ethernet adapter card, the TCP/IP protocol installed, and a valid IP address, on the same subnet as the brain. (For more information, see [“Ethernet Networking \(Ethernet Brains Only\)” on page 23](#).) In addition, you need a standard Ethernet cable for direct connection to the PC (recommended), or an available connection to a standard 10BASE-T or 100BASE-TX Ethernet network.
- **For a serial connection**, RS-485 (2-wire or 4-wire) connection to a SNAP PAC S-series controller or to a PC with an Opto 22 PCI-AC48 adapter card. (See [“Setting Up Serial Networking” on page 8](#) for more information and wiring diagrams.)
- SNAP PAC brain (See [page 27](#) for a chart comparing models.)
- SNAP PAC mounting rack and SNAP I/O modules chosen for your application.
- A SNAP-PS5 or SNAP-PS5U power supply or other 5 VDC power supply (-0/+0.1 VDC at 4.0 A) applied to the rack. (Additional power may be required for SNAP I/O modules depending on the number and type of modules used. See the module data sheets on our website, www.opto22.com, for information.)

INSTALLING HARDWARE

Assemble the rack and power supply according to the directions that came with them.


Installing Modules on the Rack

Modules snap into place in the row of connectors on the rack. Each module connector has a number. Ethernet-based brains support all SNAP I/O modules. Serial-based brains support all SNAP I/O analog and digital modules (including high-density modules).

NOTE: Any type of module can be placed in any position on the rack. Check module data sheets for power requirements and any quantity limitations. See the chart on [page 27](#) for brain compatibility.

1. Place the rack so that the module connector numbers are right-side up, with zero on the left.

INSTALLING HARDWARE

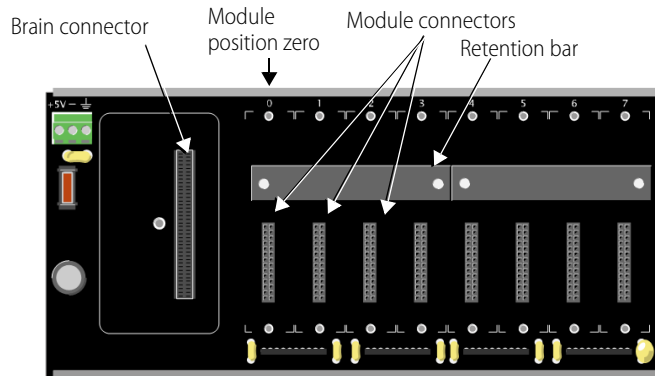

2. Position the module over the module connector, aligning the small slot at the base of the module with the retention bar on the rack.

3. With the module correctly aligned over the connector, push on the module to snap it into place.

When positioning modules next to each other, be sure to align the male and female module keys (shown in the detailed view in the illustration at right) before snapping a module into position.


Modules snap securely into place and require a special tool (provided) for removal. To remove a module, see [page 7](#).

4. (Optional) Use standard 4-40 x 1/2 truss-head Phillips hold-down screws to secure both sides of each module.

CAUTION: Do not over-tighten screws.

5. Plug the wiring connector into each module to attach modules to the devices they monitor.


Wiring diagrams are in the module's data sheet.

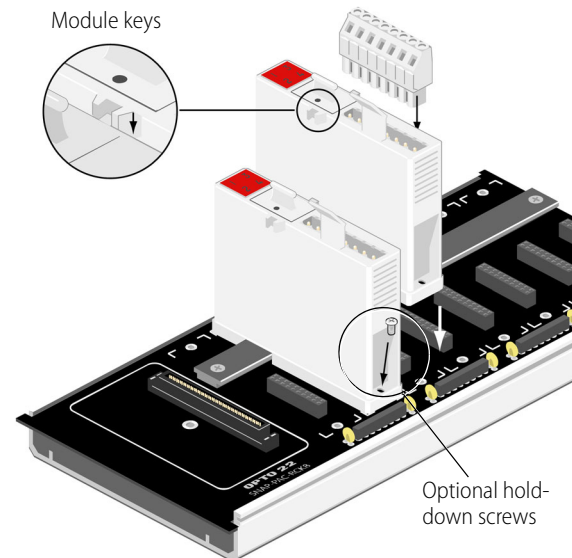

Removing a Module


If you need to remove a module, follow these steps.

1. If the modules are held in place with screws, remove them.
2. Holding the SNAP module tool (provided) as shown in the illustration at right, insert it into the notch at the base of the module.
3. Squeeze the module tool against the module to open the release latch, and pull straight up on the module to remove it.
4. Continue with [“Installing the Brain”](#) on page 7.

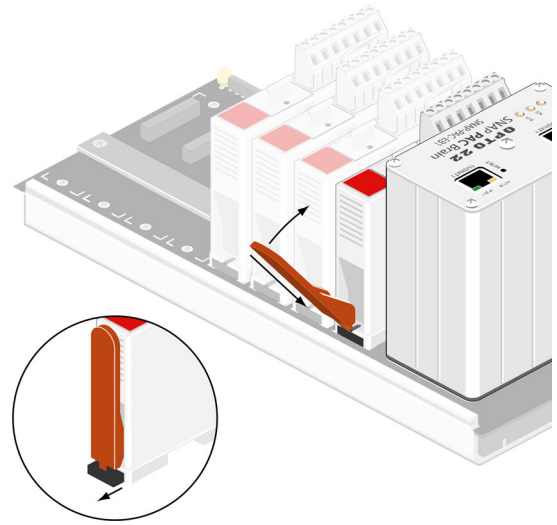

Installing the Brain

1. Remove the brain from its packaging.
2. Turn off power to the rack assembly.
3. Align the brain connector with the mating connector on the mounting rack.
4. Seat the brain onto the connector and use the hold-down screw to secure the brain in position. Do not overtighten.
5. To attach network cabling and configure addressing, skip to one of the following:
 - [“Setting Up Ethernet Networking”](#) on page 7.
 - [“Setting Up Serial Networking”](#) on page 8.

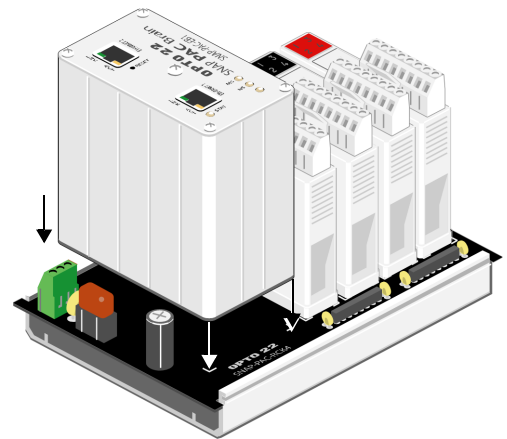

Setting Up Ethernet Networking

1. For an Ethernet brain (obsolete), use Category 5 or superior solid unshielded twisted-pair cable to connect the brain in one of the following ways:
 - (Recommended for initial configuration) Connect to a PC directly, using a standard Ethernet cable.
 - Connect to a standard 10BASE-T or 100BASE-TX Ethernet network that has a PC on the same subnet as the brain and does NOT have a Dynamic Host Configuration Protocol (DHCP) server. Maximum cable or segment length is 100 meters; minimum cable length is one meter.

NOTE: When connecting the controller to a managed switch, make sure the managed switch's port configuration is set to Auto for the Duplex setting and Auto for the Speed setting.

2. **Before** turning on power to the rack, follow instructions in the [PAC Manager User's Guide](#) (form 1704) to assign an IP address to the brain. **Exception:** If you are using the brain with an Allen-Bradley Logix® system, follow instructions in the [EtherNet/IP for SNAP PAC Protocol Guide](#) (form 1770).


Setting Up Serial Networking

The serial brain can be connected to a SNAP PAC S-series controller or to a PC equipped with an Opto 22 PCI-AC48 adapter card, which provides an RS-485 serial converter.

If you are using PAC Control software, connect the brain to an S-series controller.

Follow the diagram at right and the steps below to set up serial networking.


1. Attach an RS-485 serial cable to the serial port. (See [Appendix A: Serial Cables and Addressing](#) for cable recommendations).
2. Follow the wiring diagrams beginning on [page 10](#) for the serial network.

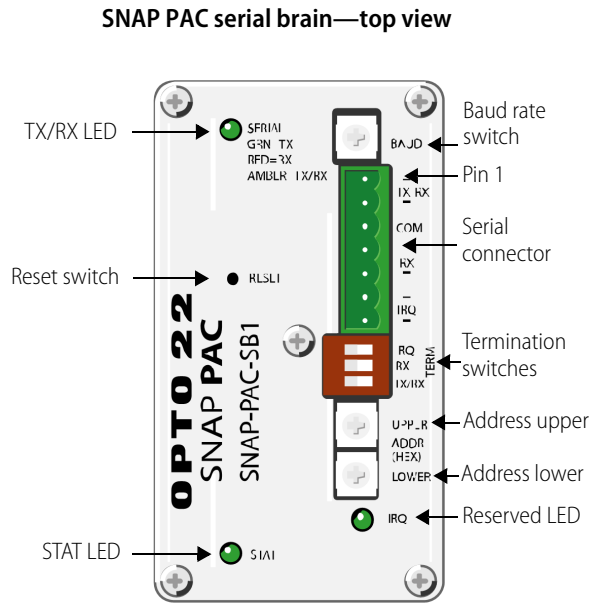

3. Rotate the baud rate switch to set the desired baud rate, as follows:

Baud rate	Switch position	Baud rate	Switch position
(Reserved)	F	4800 bps	7
230400 bps	E	2400 bps	6
115200 bps	D	1200 bps	5
76800 bps	C	600 bps	4
57600 bps	B	300 bps	3
38400 bps	A	(Reserved)	2
19200 bps	9	(Reserved)	1
9600 bps	8	(Reserved)	0

Baud Rate Switch

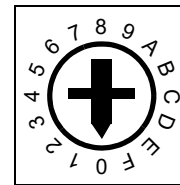


4. Set termination and biasing:

Termination: RS-485 Termination should be applied at the first device (typically a SNAP PAC S-series controller or PCI-AC48) and at the last SB brain on the RS-485 communication link. For proper termination settings, see the wiring diagrams starting on [page 10](#).

Biasing: Biasing should be applied at one location on the RS-485 communication link. Each SB brain has a very small amount of fixed bias. Be sure to apply biasing at the host device, which is typically a SNAP PAC S-series controller or a PCI-AC48.

NOTE: Bias on a SNAP PAC SB brain is always ON.

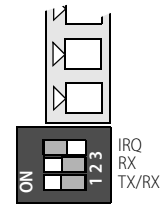


See the wiring diagrams starting on [page 10](#).

5. Use the two rotary address switches to set the unit's address. There are 256 possible addresses, 0–255. See [Appendix A: Serial Cables and Addressing](#) for a table of addresses and how to set them using the two 16-position rotary address switches.

Guidelines for Grounding SNAP PAC Brains and Controllers

Power supply side: The DC output of the power supply to the I/O unit (or controller) should be "floating," which means the negative output terminal is not tied to ground.

RS-485 serial cable side: Connect the signal common from the controller to the signal common on each of the I/O units using an insulated wire that is part of the serial cable. Though sometimes hard to find, there are cables that have a twisted pair for serial communication plus an additional insulated wire for common. However, it might be easier to obtain a cable that has an extra twisted pair and then use one of the wires from this extra pair for the signal common connections.

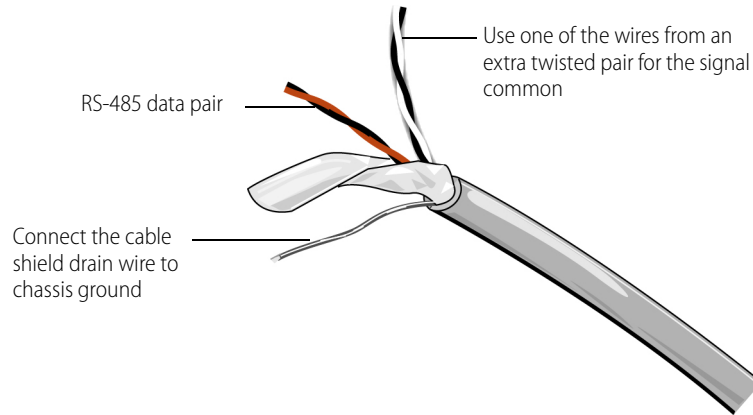


NOTE: Make sure there are enough wires in the cable for a separate insulated signal common wire. Do not connect the signal common wire to chassis ground. Do not use the overall cable shield drain wire as the signal common.

Connect the cable shield drain wire of the serial cable to chassis ground at one location only. If the shield is not continuous from one I/O unit to the next, then the shield of each segment will need to be tied to chassis ground at one location only per segment.

Serial Wiring Diagrams


Wiring a SNAP PAC SB-Series Brain to a SNAP-PAC-S1 Controller

Two-wire

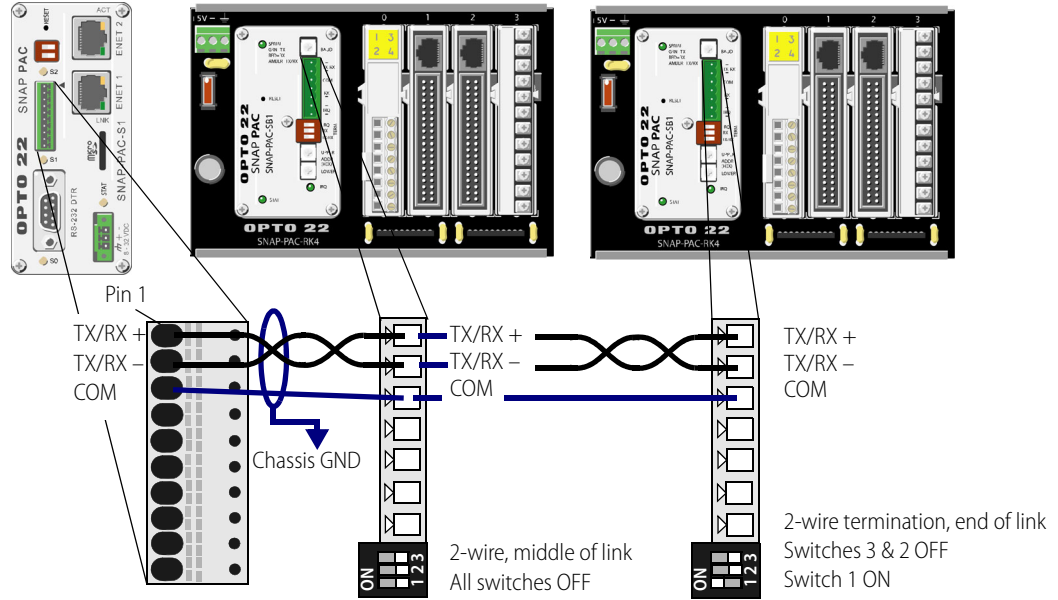


Wiring a SNAP PAC SB-Series Brain to a SNAP-PAC-S2 Controller

Two-wire

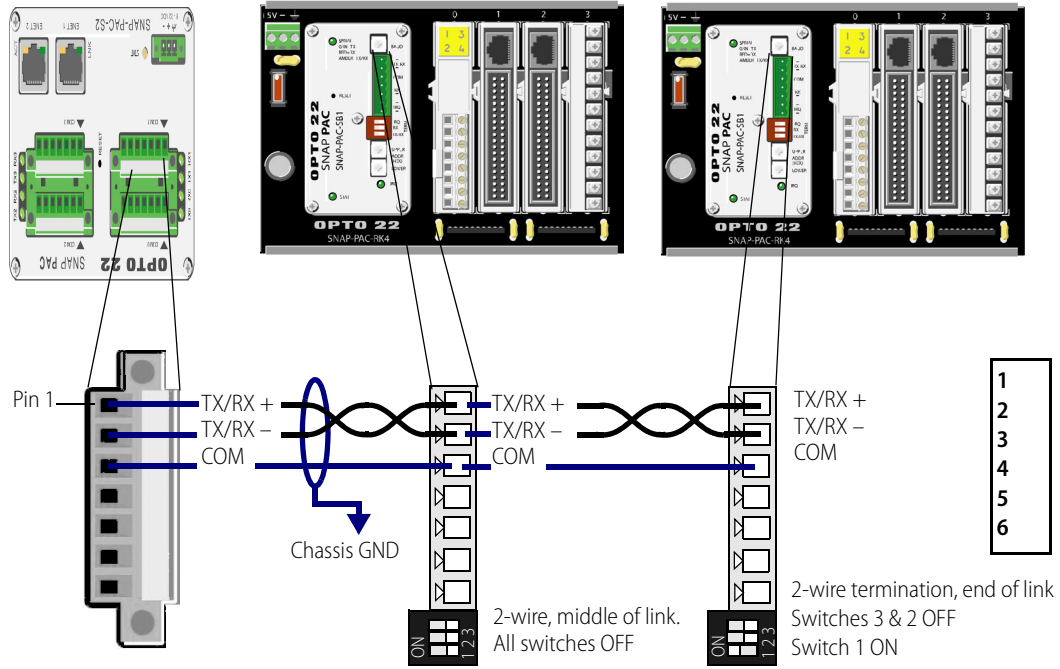


Four-wire

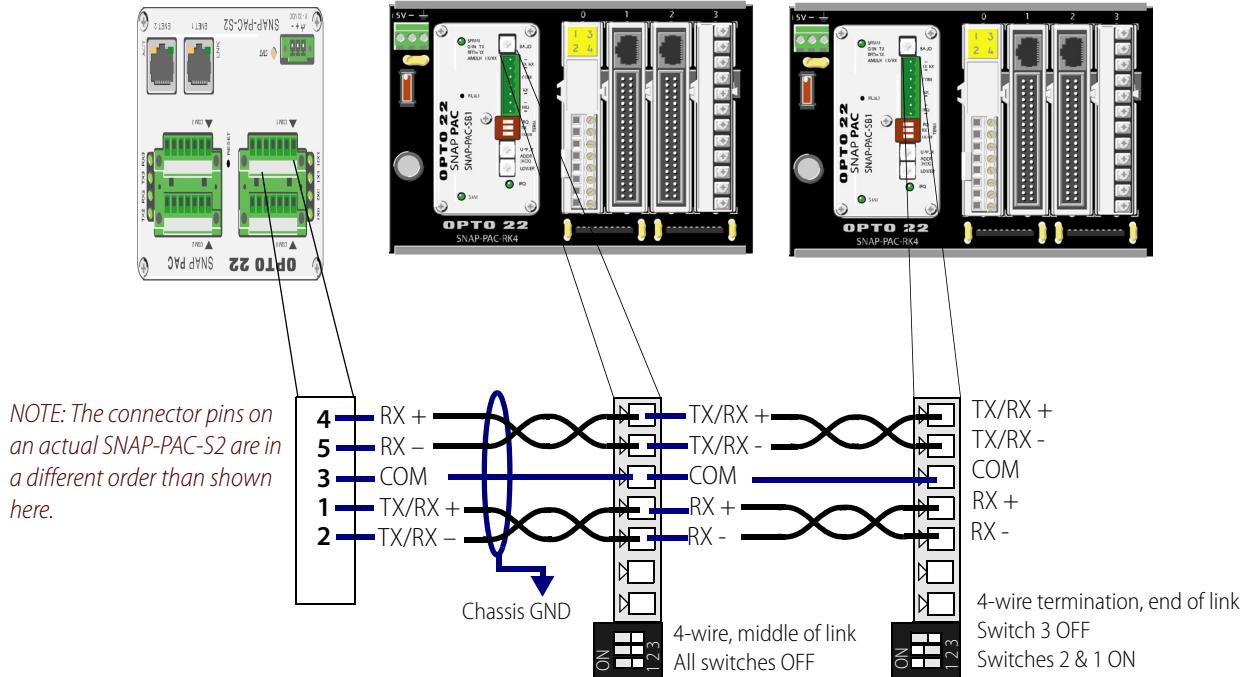


Wiring to a PCI-AC48 Adapter Card in a PC

NOTE: Check the default termination and bias on the PCI-AC48 and make certain they are set appropriately for the network.

Two-wire

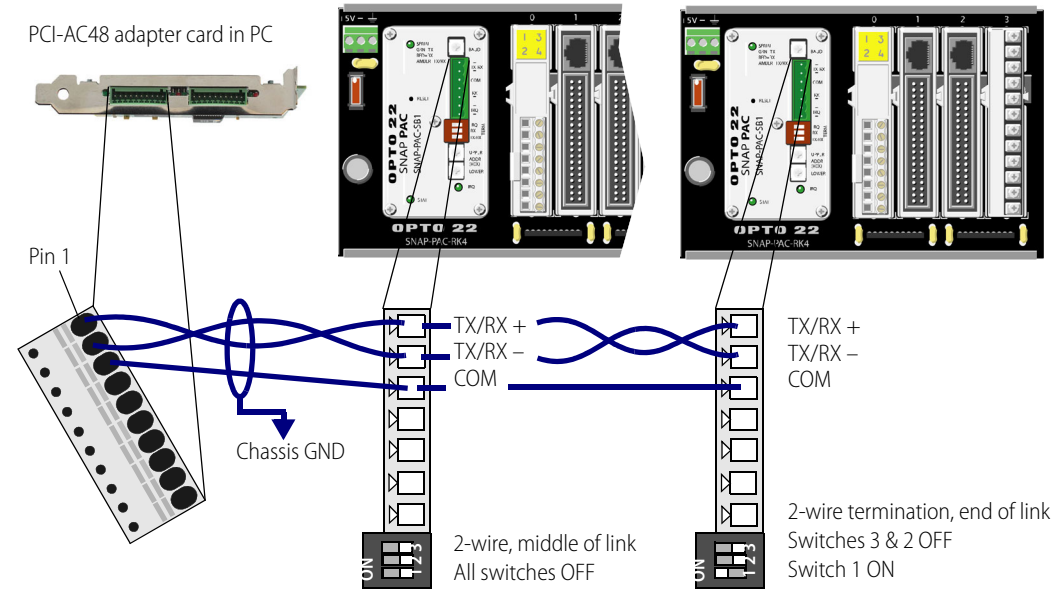

Four-wire

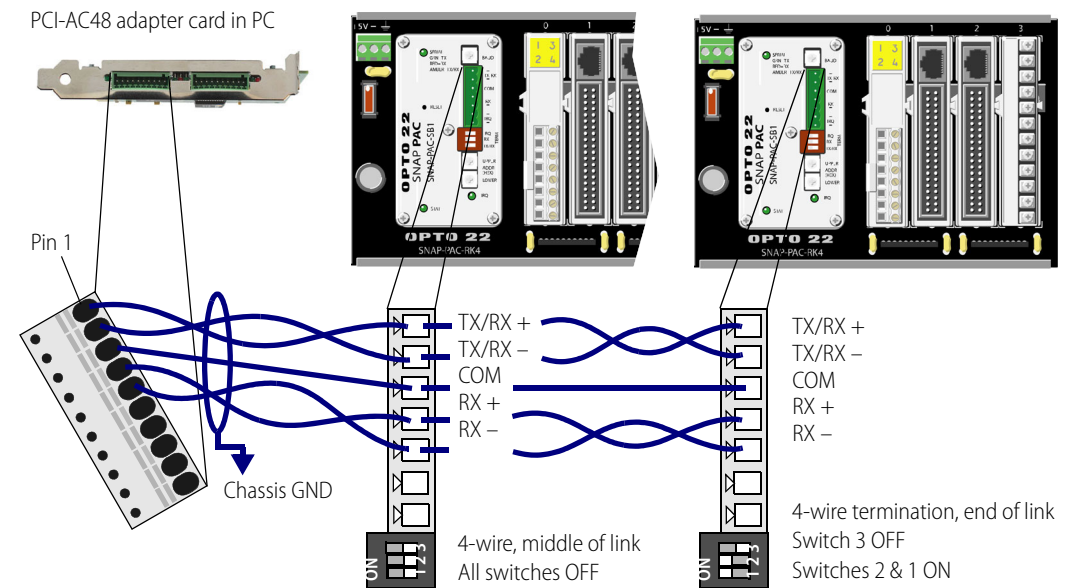

WHAT'S NEXT?

To start configuring I/O points, see one of the following:

- If you are using PAC Control software, follow instructions in the [PAC Control User's Guide](#) (form 1700).
- If you are using the brain in an A-B RSLogix system, follow configuration steps in the [EtherNet/IP for SNAP PAC Protocol Guide](#) (form 1770).
- If you are not using PAC Control or RSLogix, follow instructions in the [PAC Manager User's Guide](#) (form 1704). To learn more about SNAP PAC brain capabilities and network options, see [Chapter 3: System Architecture](#). If you are planning to install multiple Ethernet brains in a daisy-chain configuration, see "Using SNAP PAC Ethernet Brain Network Interfaces" on page 24.

To use OLE for process control (OPC) with SNAP PAC brains, purchase [OptoOPCServer](#) and see the [OptoOPCServer User's Guide](#) (form 1439, available with purchase of OptoOPCServer).

To communicate with SNAP PAC brains using Modbus/TCP, see the [Modbus/TCP Protocol Guide](#) (form 1678).

To program your own applications to communicate with the SNAP PAC brain, see the [OptoMMP Protocol Guide](#) (form 1465)

WHAT'S NEXT?

3: System Architecture

This chapter explains how to use SNAP PAC brains on an Ethernet or serial network and how to communicate with them. It includes information on:

Communication options	See below
System architecture	See page 19
Networking	See page 23
Specifications and feature comparison charts	See page 26

COMMUNICATION OPTIONS

SNAP PAC brains communicate over Ethernet or serial.

- SNAP PAC **EB** brains (obsolete) communicate over an Ethernet network (all part numbers containing *EB*). See the following section for more information.
- SNAP PAC **SB** brains communicate over a serial network (part numbers SNAP-PAC-SB1 and SNAP-PAC-SB2). See [page 16](#).

SNAP PAC Ethernet Brains (Obsolete)

SNAP PAC Ethernet-based brains communicate using TCP/IP or UDP/IP over a wired or wireless network.

Physical Layer—SNAP PAC EB brains communicate over a 10- or 100-Mbps wired Ethernet link.

Transport Layer—The key to the SNAP PAC brain's communication flexibility is the transport layer, Internet Protocol (IP). Both the Transmission Control Protocol (TCP) and the User Datagram Protocol (UDP) are used with IP.

Application Layer—Because SNAP PAC brains use standard IP for the transport layer, many communication options are possible in the application layer. After the I/O unit is installed and has an IP address assigned (see [page 7](#)), you can communicate with it using the following methods:

- **PAC Control** strategies running on a SNAP PAC controller or a *groov* EPIC processor can configure, read, and write to I/O points on SNAP PAC brains.
- **PAC Manager** software, in addition to its use for assigning IP addresses, can also be used to configure I/O points and features, and to perform onetime reads and writes.
- **EtherNet/IP** provides communication with Allen-Bradley ControlLogix[®] and CompactLogix[™] PLC systems and other systems using the EtherNet/IP protocol. Both implicit and explicit messaging are supported.

- **Modbus/TCP** provides a direct connection with Modbus/TCP hardware or software or third-party software applications, which can read or write to I/O points on SNAP PAC brains.
- **OPC** (OLE for Process Control) uses OptoOPCServer to serve data to any OPC 2.0-compliant application, such as an HMI, which can also read or write to I/O points. OptoOPCServer can be purchased separately or as part of the PAC Project Professional software suite.
- **OptoDataLink** exchanges I/O point data with ODBC-compliant databases, including Microsoft® SQL Server®, Microsoft Access®, MySQL®, and others. OptoDataLink can be purchased separately or as part of PAC Project Professional.
- **SMTP** (Simple Mail Transfer Protocol) connects a SNAP PAC brain with corporate email servers, so employees can be emailed or paged if there's a problem on devices attached to the brain.
- **SNMP** (Simple Network Management Protocol) makes it possible to monitor devices attached to SNAP PAC brains just as you would any computer or server on the Ethernet network, using an SNMP-based enterprise management system such as Computer Associates' Unicenter®, Hewlett-Packard's OpenView®, or IBM's Tivoli®. When a monitored event occurs, such as a door left open or a pressure level too high, the brain sends an SNMP trap to the management system (compatible with SNMP v2.0c using brain firmware R8.2a or higher).
- **FTP** (File Transfer Protocol) can be used to transfer files and data to and from the SNAP PAC brain, whether to custom applications, enterprise databases, or any file system.
- **Custom software applications** are easy to develop using our free [OptoMMP software development kits \(SDKs\)](#). They use the OptoMMP protocol, an IEEE 1394-based protocol, to read and write to SNAP PAC brains.
 - For Visual Basic® and C++®—the [PAC-DEV-OPTOMMP-CPLUS](#) software development kit (SDK). The SDK supports Microsoft Windows® and Linux, and includes all documentation.
 - For Visual Studio® 2010 through 2017—the [PAC-DEV-OPTOMMP-DOTNET](#) SDK for .NET developers. The SDK supports Microsoft's .NET frameworks 4.0 through 4.5, and includes all documentation.

Simultaneous Communication

The SNAP PAC Ethernet brain can communicate *simultaneously* using all of the methods listed above. The reason lies in the nature of IP.

In serial communication, a single data request is sent by one device to another. The first device must wait for a response before any additional communication can be carried out. IP, however, can establish multiple simultaneous sessions, so many data requests can be sent at once without waiting for any individual response. Each request gets a response, but the link isn't idle while waiting for responses.

In addition, IP can simultaneously handle multiple requests from multiple devices. A PC can communicate with all SNAP PAC brains and controllers on the same network—all at the same time—and multiple PCs can communicate with one SNAP PAC device at the same time.

So, for example, a SNAP PAC brain can respond to directions from a Modbus master, give analog point data to a technician using PAC Manager, and carry out instructions from a custom C++ application—all at once.

SNAP PAC Serial Brains (Obsolete)

SNAP PAC serial brains use an RS-485 link, either 2-wire or 4-wire. Communication can be through any SNAP PAC S-series controller (via an Ethernet connection to the controller and then a serial connection from the controller to the brain)¹ or directly from a PC to the brain (using the computer's serial port via a serial cable and an RS-485 adapter, such as an Opto 22 PCI-AC48 adapter card). More information on wiring begins on [page 8](#).

¹For information about data transfer speed when using a controller to communicate with a serial brain, see [page 43](#).

Communication methods include:

- **PAC Control** strategies running on a SNAP PAC controller can configure, read, and write to I/O points on SNAP PAC brains.
- **PAC Manager** software can be used to configure I/O points and features; in addition it can be used to perform onetime reads and writes.
- **Custom software applications** can be developed using the OptoMMP protocol to read and write to SNAP PAC brains. For Ethernet brains, use our [OptoMMP SDKs](#). For serial brains, the Toolkit cannot be used, but you can build your own driver for the protocol.

OPC clients and **SQL databases** can exchange data with SNAP PAC serial brains through the SNAP PAC controller. You can use OptoOPCServer for communication with any OPC 2.0-compliant application, such as an HMI. Use OptoDataLink for connectivity with ODBC-compliant databases, including Microsoft SQL Server, Microsoft Access, and MySQL. OptoOPCServer and OptoDataLink can be purchased separately or as part of PAC Project Professional.

Communication routes are summarized in the following table.

For this purpose	Use this software	Communication route		
		Direct (serial)		Through controller (Ethernet)
		From controller	From PC	
Configuration, control, monitoring, and data acquisition	PAC Control	●		
	Custom software		●	
Configuration and one-time reads/writes for testing or troubleshooting	PAC Manager		●	●
OPC communication	OptoOPCServer			●
SQL database connectivity	OptoDataLink			●

Accessing SNAP PAC Brains Over the Internet

Since **SNAP PAC Ethernet brains** are just like any other hardware on the Ethernet network, you can access them over the Internet in exactly the same way you would access a computer. The details depend on your network and Internet connection. Consult your system or network administrator or your Internet Service Provider (ISP) for more information.

SNAP PAC serial brains cannot be directly accessed over the Internet; communication must go through the SNAP PAC controller or through a PC with a PCI-AC48 adapter card.

Choosing Communication Methods

How do you need to communicate with SNAP PAC brains to match the tasks your application requires? Check the following table for help in choosing communication methods and finding out where to look for more information on them.

This task	Can be done using these methods		Comments and references
	Recommended	Alternate	
Configure I/O units.	PAC Control, EtherNet/IP Configurator, or PAC Manager	OptoMMP SDKs or OptoMMP protocol	If you are using PAC Control, configure the system in PAC Control. See the PAC Control User's Guide (form 1700). If communicating with an A-B Logix system, use EtherNet/IP Configurator. See the EtherNet/IP for SNAP PAC Protocol Guide (form 1770). For the Communication Toolkit or OptoMMP protocol, see the OptoMMP Protocol Guide (form 1465).
Monitor and control processes; acquire data.	PAC Control flow-chart logic	PAC Manager Inspect window or OptoMMP SDKs or OptoMMP protocol	For more information see the PAC Control User's Guide (form 1700) and the PAC Control Command Reference (form 1701). CAUTION: Events and reactions set up using alternate methods are faster than flowchart logic, but be careful if you use them. They can conflict with PAC Control logic, because both write to the brain's memory map. For Communication Toolkit or OptoMMP protocol, see the OptoMMP Protocol Guide (form 1465).
Give technicians an HMI with alarming and trending.	PAC Display		See the PAC Display User's Guide (form 1702).
Communicate with Allen-Bradley Logix PLC systems	EtherNet/IP		Ethernet-based brains only. See the EtherNet/IP for SNAP PAC Protocol Guide (form 1770).
Communicate with Modbus/TCP hardware or software.	Modbus/TCP		Ethernet-based brains only. For details, see the Modbus/TCP Protocol Guide (form 1678).
Exchange I/O point data with third-party software such as HMIs and databases.	OptoOPCServer for OPC; OptoDataLink for databases	<i>groov</i> EPIC processor software (EB brains only)	Purchase OptoOPCServer or OptoDataLink separately or as part of PAC Project Professional. NOTE: EB brains can communicate directly with OptoOPCServer and OptoDataLink. SB brains must communicate through a PAC Control strategy running on an S-series controller. See the OptoOPCServer User's Guide (form 1439). The OptoDataLink User's Guide (form 1705) is available with purchase of OptoDataLink .
Send email or page someone. Send SNMP trap. Monitor devices through an enterprise management system.	PAC Control (and PAC Manager for configuration)	OptoMMP SDKs or OptoMMP protocol	Ethernet-based brains only. If you are using PAC Control, configure email using PAC Manager. See the PAC Manager User's Guide (form 1704). For Communication Toolkit or OptoMMP, see the OptoMMP Protocol Guide (form 1465).
Write your own software application to communicate with the system.	C++ and .NET: OptoMMP SDKs and brain's memory map.	Opto 22's OptoMMP protocol and brain's memory map.	See the OptoMMP Protocol Guide (form 1465).

SYSTEM ARCHITECTURE

SNAP PAC brains can be used in the following ways:

- For distributed intelligence in a larger control system based on a SNAP PAC controller or *groov* EPIC processor running PAC Control, or an Allen-Bradley PLC running an RSLogix program
- As an independent I/O processor

The following diagrams illustrate these uses.


SNAP PAC Brains as Part of a Distributed SNAP PAC System

The following diagram shows only basic SNAP PAC System capabilities using free PAC Project Basic software. For information on additional capabilities, such as communication with OPC clients, databases, and third-party systems, see the *SNAP PAC System Specification Guide* (form 1696).

PC used to develop a PAC Control strategy.

Once developed, the strategy runs independently on the SNAP PAC controller.


SNAP PAC brains and I/O (distributed units). The top four are on an Ethernet network; the bottom two are on a serial network.

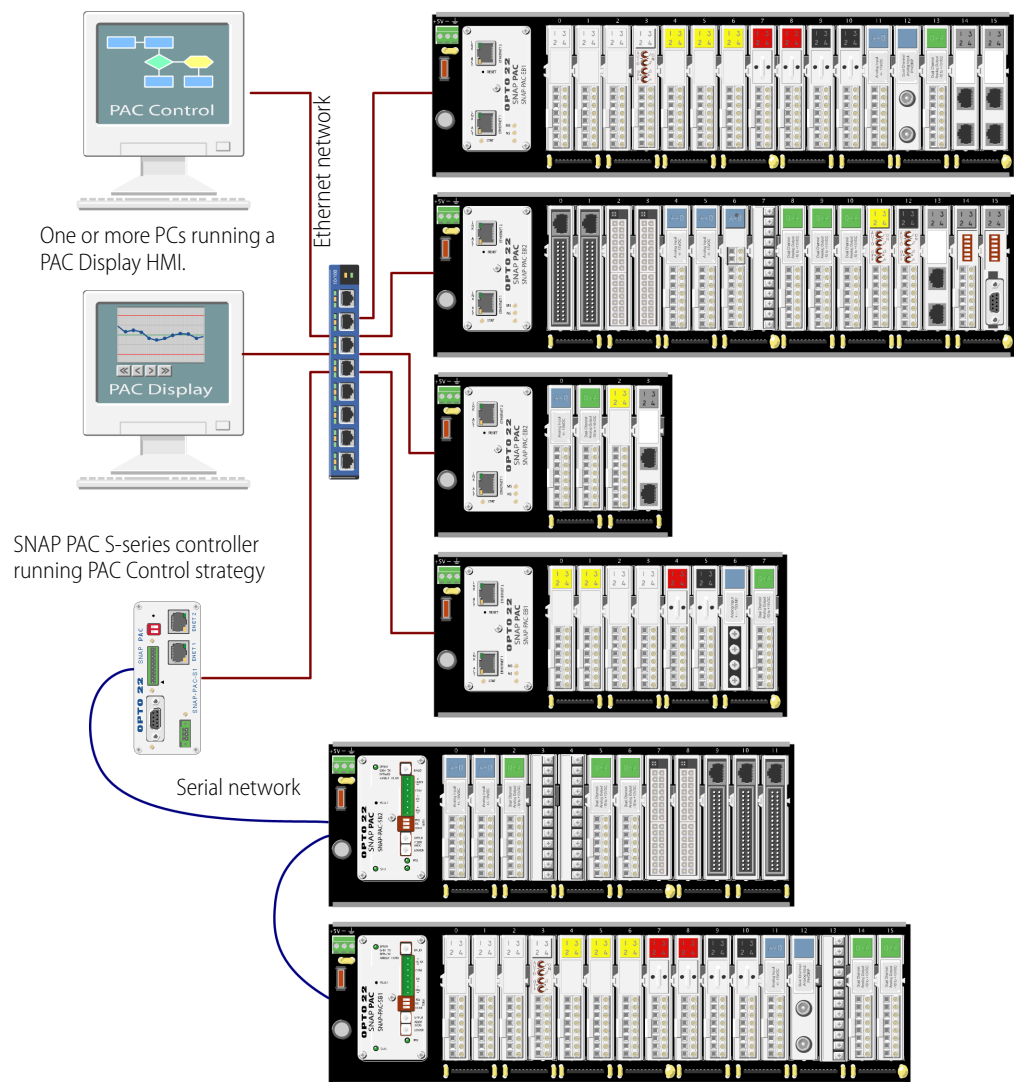

SNAP PAC Ethernet Brain in an Allen-Bradley Logix System

SNAP PAC Ethernet brains can be used as intelligent remote I/O in an A-B Logix system, such as ControlLogix (shown below) or CompactLogix. The brain is more than a bus coupler but does not require programming. Instead, multiple I/O functions are built in.


Because the brain automatically handles many processing tasks locally, you can add more I/O points and process control functions to your system with little impact on PLC scan time. The system as a whole becomes more efficient with intelligence distributed to the remote I/O.

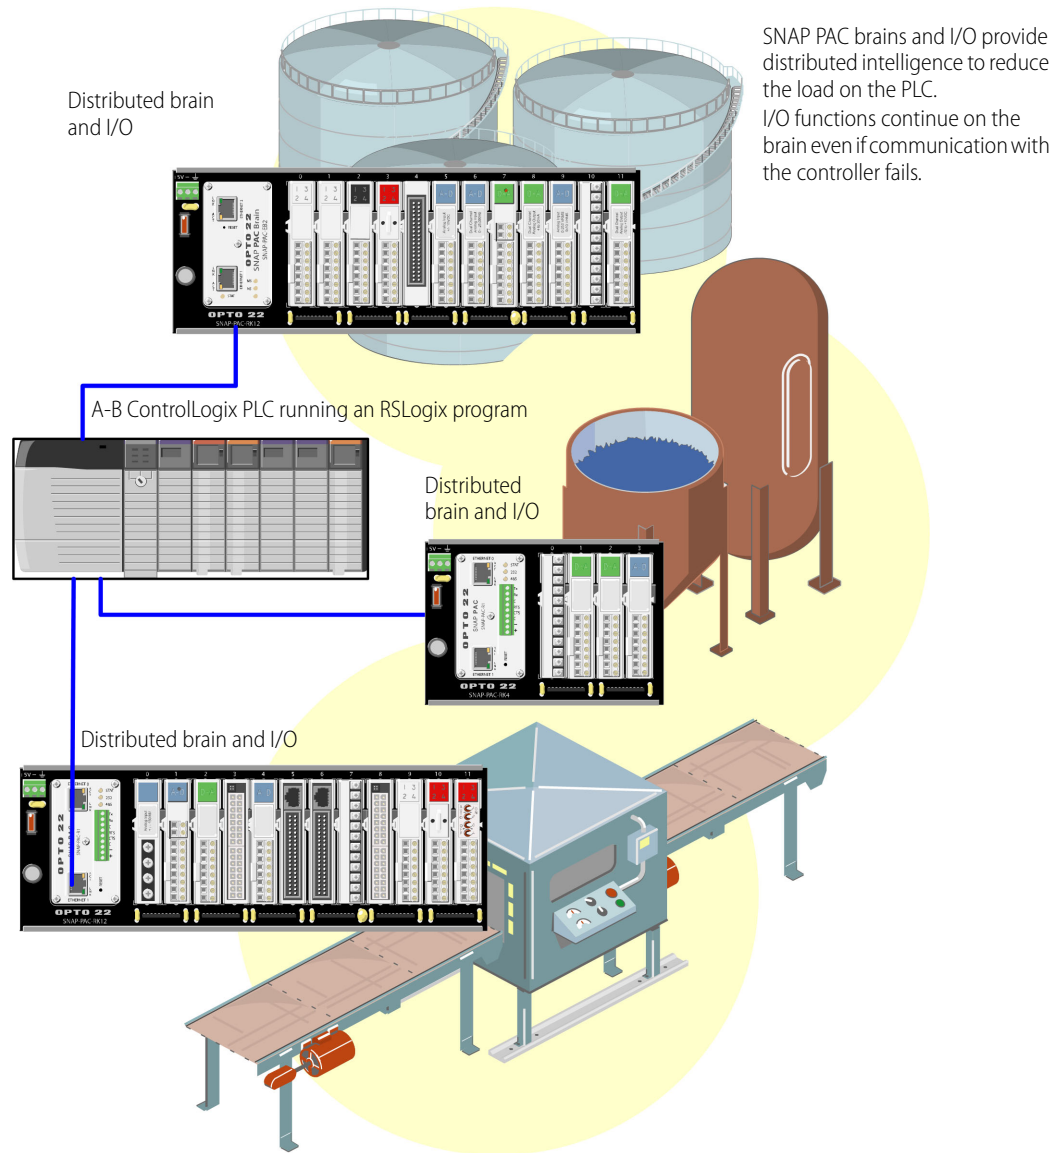

SNAP PAC brains and I/O provide distributed intelligence to reduce the load on the PLC. I/O functions continue on the brain even if communication with the controller fails.

SNAP PAC Ethernet Brain as an Independent I/O Processor


As the following diagram illustrates, you can communicate with an independent SNAP PAC Ethernet brain using Modbus/TCP, the OptoOPCServer (available separately), SNMP, SMTP, or applications you develop using the free [OptoMMP SDKs](#) or our OptoMMP protocol.

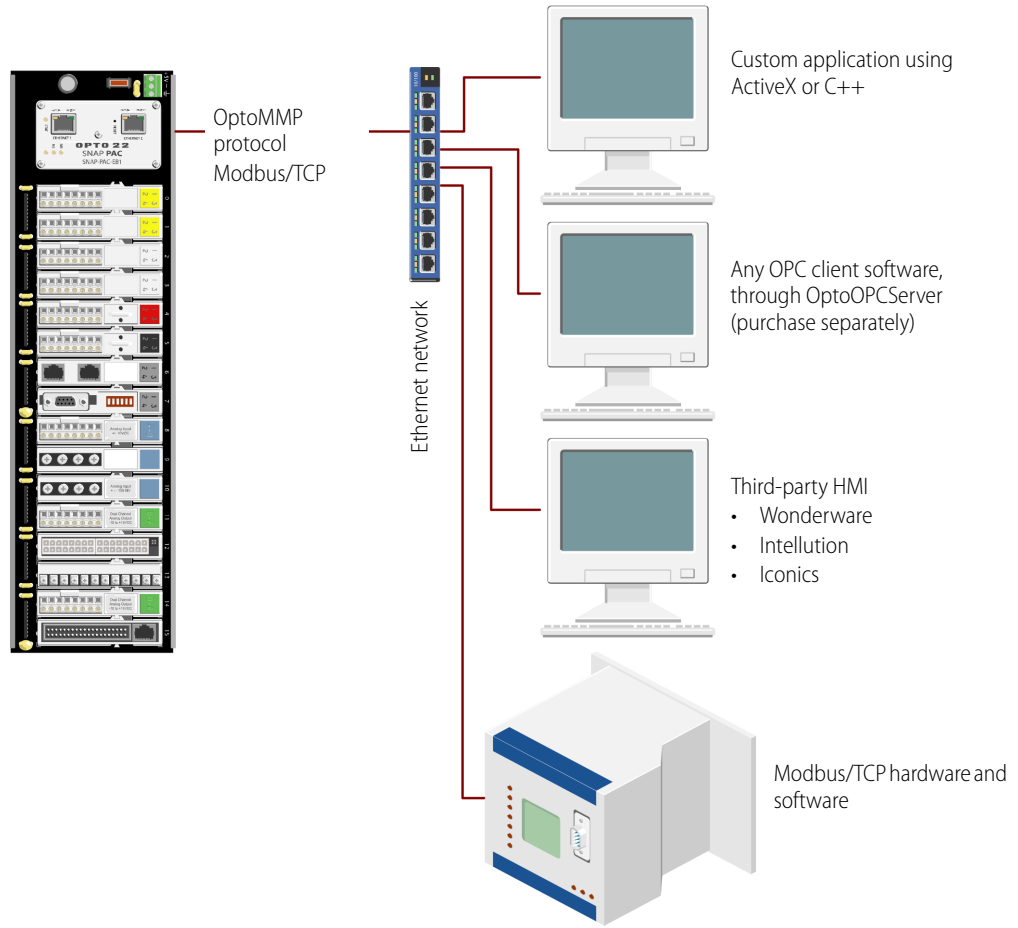

SNAP PAC Serial Brain as an Independent I/O Processor

As the following diagram shows, you can communicate with an independent SNAP PAC serial brain using a PC with an Opto 22 PCI-AC48 adapter card. Note that you need to write your own driver for the OptoMMP protocol in order to develop custom software. The OptoMMP SDKs cannot be used with serial brains; it handles Ethernet communication only.

See [“Setting Up Serial Networking” on page 8](#) for more information on wiring to the PC.

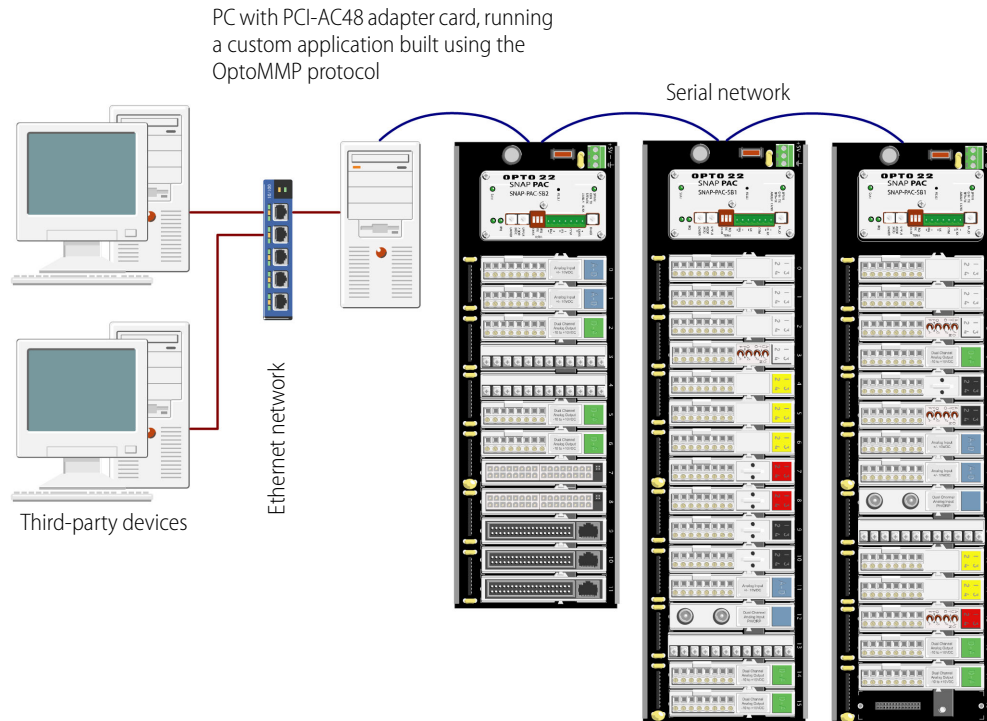

ETHERNET NETWORKING (ETHERNET BRAINS ONLY)

From a physical standpoint, obsolete SNAP PAC Ethernet brains can be networked in several ways:

- Connected directly to a PC or controller using a standard Ethernet cable
- Attached to an existing TCP/IP Ethernet network
- As part of an independent network built with standard Ethernet hardware

The networking method you use depends on several things, including whether you need control or data acquisition, the number of PCs and I/O units you are using, the speed and volume of communication, security requirements, and the availability of an Ethernet network.

As an option in any network, you can install multiple brains in a daisy-chain configuration. See [page 24](#) for more information.

Connecting Directly to a PC or Controller

A direct connection using a standard Ethernet cable connects the SNAP PAC brain with one host, either a PC or a controller. (The Ethernet interfaces on the EB support Auto MDI-X, which means a crossover cable is not needed for direct connection to a PC.) You can use either Ethernet interface on the brain for the connection. Additional SNAP PAC brains can be daisy-chained from the first brain using the brain's second Ethernet network interface, which acts as a network switch. See ["Using SNAP PAC Ethernet Brain Network Interfaces"](#) on [page 24](#) for more information.

If you need only a small control or monitoring network and have no existing Ethernet network, a direct connection is ideal. It's quick, easy, and inexpensive because it requires only cables (no separate Ethernet switches or routers). It also provides high speed and high security for a small system.

A direct connection is also useful for assigning an IP address, configuring I/O points, and testing applications. The direct connection eliminates other variables that could interfere with communication, so you can focus on maintenance and troubleshooting.

Attaching to an Existing Ethernet Network

The first rule in attaching SNAP PAC Ethernet brains to an existing network is to work closely with your system administrator, who must determine network topology and hardware. Be sure to consider the impact on your existing network of adding the brains. For best performance, use a 100 Mbps network.

In addition, make sure the system administrator understands that each brain must have a **fixed (static)** IP address, whether or not a Dynamic Host Configuration Protocol (DHCP) server is used on the network. For more information on IP addresses, see the *PAC Manager User's Guide* or the *EtherNet/IP for SNAP PAC Protocol Guide*.

Because the SNAP PAC brain has two switched Ethernet interfaces, the brains can optionally be daisy-chained together. (See ["Using SNAP PAC Ethernet Brain Network Interfaces"](#) on [page 24](#).)

If you need to isolate the control system data from the main network backbone, you can use a router, network switch, or other gateway device. You can also use a SNAP PAC controller, which has two independent Ethernet network interfaces: one interface can be connected to the enterprise network, and the other used for the control system. For more information on network options, see the *SNAP PAC System Specification Guide* (form 1696).

Developing an Independent Ethernet Network

The third way SNAP PAC Ethernet brains can be used is by developing an independent network. An independent network gives a high level of communication speed and volume, as well as higher security. You

may also need a separate network for critical control applications. Again, the choice depends on your requirements for data transactions, data security, and whether a near-deterministic system is necessary.

If you are building your own network, remember that each brain must have a **fixed** IP address. See the *PAC Manager User's Guide* for more information on IP addresses.

If you have no existing Ethernet network, you can use off-the-shelf Ethernet components to build one. Since Ethernet and TCP/IP are worldwide standards, there are a number of commercially available resources for learning about building and maintaining such a network. We strongly suggest you learn as much as possible about the subject and plan your network carefully before beginning, in order to get the best performance from your system.

Because SNAP PAC brains have two switched Ethernet network interfaces, you can install them in a daisy-chain configuration. See the next section for more information.

Using SNAP PAC Ethernet Brain Network Interfaces

As illustrated conceptually at right, SNAP PAC Ethernet brains have two network interfaces. Ethernet 1 and Ethernet 2 are not redundant interfaces; they are connected by an unmanaged switch.

Ethernet devices are normally networked in a standard star configuration. If you are using this standard configuration, connect either Ethernet 1 or Ethernet 2 to the network. The two interfaces share the same IP address, and either one will send a BootP request.


As an option, however, the SNAP PAC brain's two switched Ethernet interfaces let you use a daisy-chain configuration for distributed I/O, connecting just one brain to the network and then connecting subsequent brains in a chain.

NOTE: *If you replace a SNAP PAC Ethernet brain with a SNAP PAC R-series controller, be aware that the controller has two independent, not switched, Ethernet interfaces. You can install an R-series brain only in a star configuration, not daisy chained. Contact Opto 22 Product Support (page 4) with any networking questions.*


The primary advantage of daisy-chaining is that you save the expense of network routers or switches. The primary disadvantage is similar to that of a serial network: if communication with one brain is lost, communication to all brains beyond it on the daisy chain will also be lost.

Note that if you are updating firmware on the brain, you must update each brain in the daisy chain separately.

IMPORTANT: *If you choose a daisy-chain configuration, make certain that the brains are connected correctly. Incorrect connections can produce major problems on the network. Make sure that daisy-chain connections are made in a simple open-ended chain, as shown in the diagram on the following page.*

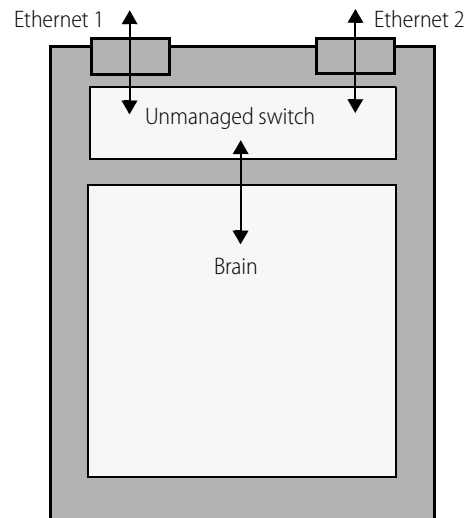

Correct Connections for Daisy-Chaining

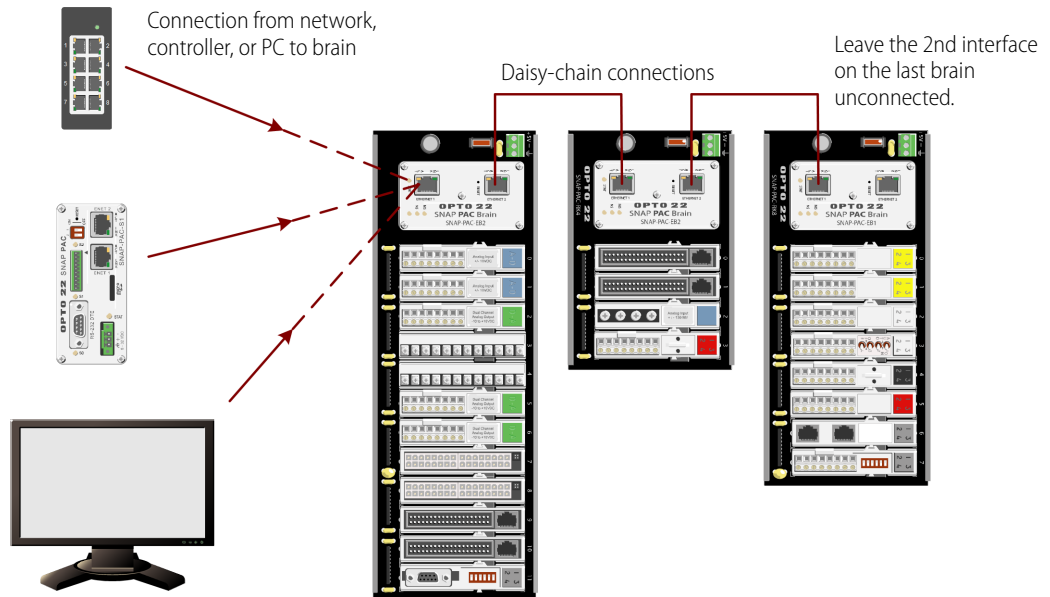


NOTE: Connection from a PC does not require a crossover cable. Use a standard Ethernet cable.

Never connect SNAP PAC Ethernet brains in a loop or ring. For example, do not connect both ends of the chain to the same switch, nor to different switches on the same network. As a rule, do not connect the second Ethernet interface on the last brain in the chain to any other device.

NOTE: There is one exception to this rule: you can connect the network in a loop if at least one switch in the loop supports STP/RSTP (Spanning Tree Protocol/Rapid Spanning Tree Protocol) and has that feature enabled.

Incorrect Network Connections

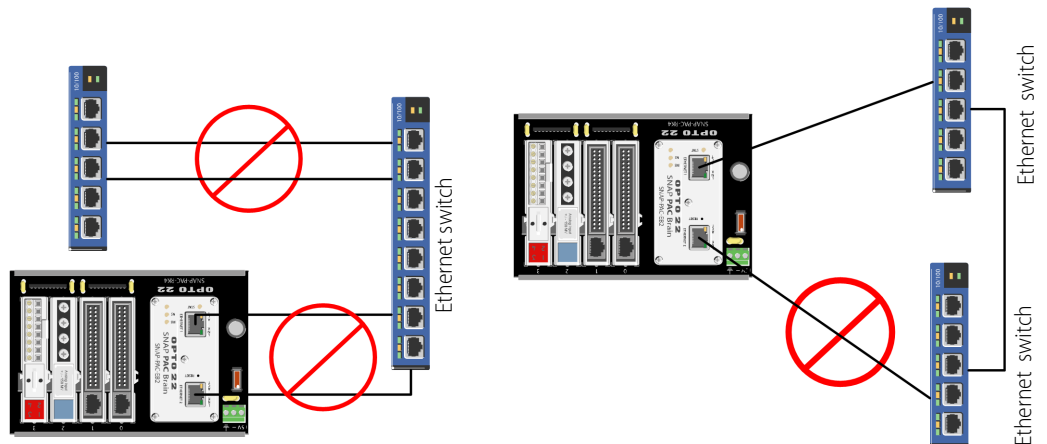

SPECIFICATIONS


Serial and Ethernet Brains (Obsolete)	
Power Requirements	5.0–5.2 VDC at 750 mA maximum (does not include module power requirements)
Memory	16 MB RAM
Backup battery for real-time clock	Rechargeable (recharges whenever the brain has power). 5-year life when power is off (replacement part number: SNAP-PAC-BATTERY-ML2430). (Models manufactured before August 2007 have a 3-volt CR2032 lithium battery, available in retail stores. See original user guide for replacement steps.)
Hold-down screw	Torque: 8 in-lb (0.9 N-m)
Operating Temperature	-20 to 60 °C
Storage Temperature	-40 to 85 °C
Humidity	0–95% humidity, non-condensing
Agency approvals and certifications	-EB models: UL, CE, RoHS, DFARS; UKCA -SB models: CE, RoHS, DFARS; UKCA -FM models only: Factory Mutual approved
Warranty	30 months from date of manufacture
Ethernet Brains (EB) only (Obsolete)	
Ethernet Network Interfaces	IEEE 802.3 network, 10Base-T and 100Base-TX. Supports Auto MDI-X (crossover cable not needed). Two switched interfaces, allowing multi-drop (daisy-chain) or standard star network configuration.
Maximum Ethernet Segment Length	100 meters with Category 5 or superior UTP For 100 Mbps at this distance, use Category 5 or superior solid UTP.
Serial Brains (SB) only (Obsolete)	
Network interfaces	RS-485, 2- or 4-wire, twisted pair(s), with shield
Serial data rates	300 baud to 230.4 Kbaud
Range: Serial multidrop	32 stations maximum on a segment (including PC, controller, repeaters, and I/O units); up to 3000 ft (914 m) on a segment
Connector screw	Torque: 1.7 in-lb (0.19 N-m)

LEDs and Network Interfaces—Ethernet Brains (Obsolete)

Switched Ethernet network interfaces

Brains can be networked in a daisy-chain configuration or in a standard star configuration using either Ethernet interface. Both interfaces use the same IP address.

NOTE: When using a daisy-chain configuration, be aware that if power to a brain is lost, all brains beyond it on the network will also lose communication. Firmware on daisy-chained brains must be updated one at a time.

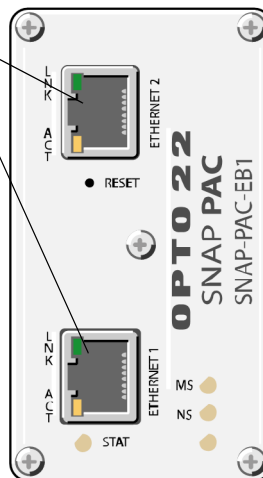

LEDs


LED	Indicates
LNK	Link established with Ethernet network
ACT	Activity on Ethernet network
STAT	Brain status
MS	EtherNet/IP Module Status
NS	EtherNet/IP Network Status
Unnamed	Reserved for future use

See “Correct Connections for Daisy-Chaining” on page 25 and “Blink Codes” on page 35.

LEDs and Network Interfaces—Serial Brains (Obsolete)

LEDs

LED	Indicates
SERIAL	Green = Transmit
	Red = Receive
	Amber = Transmit/Receive
STAT	Brain status
IRQ	Reserved for future use

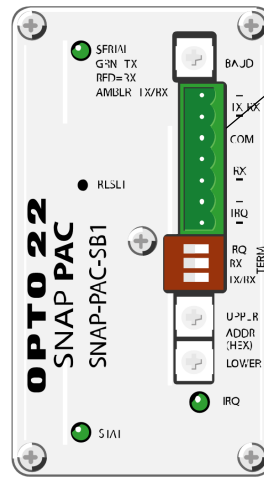

Serial port

On a serial brain, the port is RS-485, either 2-wire or 4-wire. Baud rate, termination, and address are set using the switches on the brain's top cover. See termination and biasing instructions on [page 8](#).

NOTE: IRQ connections and LED are reserved for future use.

See [Appendix A: Serial Cables and Addressing](#) for serial cable recommendations. See “[Setting Up Serial Networking](#)” on [page 8](#) for wiring. For details on LEDs, see “[Blink Codes](#)” on [page 35](#).

SNAP PAC BRAIN COMPARISON CHART

For feature descriptions, see [page 29](#). This table compares SNAP PAC brains with firmware R8.5 or newer. **All SNAP PAC brains are obsolete.**

FEATURE	SNAP-PAC-EB1	SNAP-PAC-EB1-FM	SNAP-PAC-EB2	SNAP-PAC-EB2-FM	SNAP-PAC-SB1	SNAP-PAC-SB2
Serial networking (RS-485, 2-wire or 4-wire)					●	●
Factory Mutual approval (U.S. and Canada)		●		●		
Ethernet networking with two switched Ethernet network interfaces (one IP address)	●	●	●	●		
Ethernet network security (IP filtering, port access)	●	●	●	●		
On/off status	●	●	●	●	●	●
Input latching	●	●	●	●	●	●
Watchdog timer	●	●	●	●	●	●
High-speed counting (up to 20 kHz) ²	●	●			●	
Quadrature counting ³	●	●			●	
On-pulse and off-pulse measurement ^{2,4}	●	●			●	
Frequency and Period measurement ⁴	●	●			●	
TPO (time-proportional output) ⁴	●	●	●	●	●	●
Digital totalizing ⁴	●	●	●	●	●	●
Pulse generation (N pulses, continuous square wave, on-pulse, and off-pulse) ⁴	●	●	●	●	●	●

SNAP PAC BRAIN COMPARISON CHART

FEATURE		SNAP-PAC-EB1	SNAP-PAC-EB1-FM	SNAP-PAC-EB2	SNAP-PAC-EB2-FM	SNAP-PAC-SB1	SNAP-PAC-SB2
Analog I/O point features	Thermocouple linearization (32-bit floating point for linearized values)	●	●	●	●	●	●
	Minimum/maximum values	●	●	●	●	●	●
	Offset and gain	●	●	●	●	●	●
	Scaling	●	●	●	●	●	●
	Time-proportional output ⁵	●	●	●	●	●	●
	Output clamping	●	●	●	●	●	●
	Filter weight	●	●	●	●	●	●
	Watchdog timer	●	●	●	●	●	●
	Analog totalizing ⁴	●	●	●	●	●	●
	Ramping ⁴	●	●	●	●	●	●
I/O modules supported	Digital (4–32 channels per module)	●	●	●	●	●	●
	Analog (2–32 channels per module)	●	●	●	●	●	●
	Serial (RS-232, RS-485, motion control, Profibus [®] , Wiegand [®])	●	●	●	●		
Maximum number of modules allowed per I/O unit (with largest rack): Any mix of 16 digital, 16 analog, 8 serial or special-purpose		●	●	●	●	● ¹	● ¹
PID logic on the brain (96 PID loops per brain)		●	●	●	●	●	●
Scratch Pad area for peer-to-peer data (bits, floats, integers, strings)		●	●	●	●	●	●
Realtime clock (RTC)		●	●	●	●	●	●
OPC driver support		●	●	●	●	● ⁸	● ⁸
OptoMMP memory-mapped protocol		●	●	●	●	●	●
EtherNet/IP [™] (Allen-Bradley [®] Logix systems and others)		●	●	●	●		
Modbus [®] /TCP (slave; maximum two Modbus Master connections)		●	●	●	●		
SNMP (network management) ⁷		●	●	●	●		
FTP server, file system		●	●	●	●		
Email (SMTP client)		●	●	●	●		
UDP Streaming		●	●	●	●		
Digital events, Alarm events, Serial events		●	●	●	●	● ⁹	● ⁹
Event messaging		●	●	●	●		
Data logging in the brain		●	●	●	●		

¹ Does not support serial, motion control, Profibus, or Wiegand modules.
² Four-channel digital modules only; not available on high-density digital modules.
³ Requires a SNAP quadrature input module (SNAP-IDC5Q).
⁴ Available when used with PAC Control Pro R8.2 (or higher) or PAC Control Basic R9.0 (or higher) and a SNAP PAC controller; or when used as remote intelligent I/O with a groov EPIC processor or an Allen-Bradley[®] PLC system.
⁵ Requires a SNAP analog TPO module (SNAP-AOD-29).
⁶ Digital I/O modules can be placed only in the first 8 slots on the rack.
⁷ Currently available on all types of modules except analog modules with more than 4 points.
⁸ Available when used with OptoOPCServer and PAC Control, through a SNAP PAC S-series controller.
⁹ Does not support serial events.

Feature Descriptions

See the feature table on [page 27](#). For additional information, including configuration, see the *PAC Manager User's Guide*.

Feature	Description
States	(Digital input and output)—A digital point is either on or off. You can read the current state of a digital input or write an on/off state to a digital output.
Latches	(Digital input)—When the value of a digital input point changes from off to on, an on-latch is automatically set. While the value of the point may return to off, the on-latch remains set, as a record of the change, until you clear it. Similarly, an off-latch is set when the value of a digital point changes from on to off, and it remains set until cleared.
Counters	(Digital input)—A counter keeps track of the number of times a digital input changes from off to on. The count accumulates until it reaches the maximum count available in the brain or until you reset the counter to zero. For example, to count the number of widgets produced per shift, you would clear the counter at the start of each shift and read it at the end of each shift. SNAP-PAC-EB1 and SNAP-PAC-SB1 brains offer high-speed counting (up to 20 KHz) on 4-channel modules; the speed of the counter depends upon the speed of the module used. EB2 and SB2 brains do not offer high-speed counting. All brains can be used with high-density modules (modules with more than four points). These modules offer counting (up to about 50 Hz) within the module.
Quadrature counters	(Digital input)—A quadrature counter requires a SNAP-PAC-EB1 or SNAP-PAC-SB1 and a SNAP quadrature input module (SNAP-IDC5Q), which can be wired to two encoders. The module sends a pulse to the brain upon each change in quadrature state, and the brain counts the pulses and keeps track of the direction and rotation.
On-pulse and off-pulse measurement	(Digital input; requires SNAP-PAC-EB1 or SNAP-PAC-SB1 brain with firmware 8.2 or higher, PAC Project Pro 8.2 or higher, and a SNAP PAC controller)—A pulse is a brief on (or off) state, usually repeated at a specific interval. The brain can measure the first pulse, that is, the amount of time the input stays on (or stays off).
Frequency and Period measurement	(Digital input; requires SNAP-PAC-EB1 or SNAP-PAC-SB1 brain with firmware R8.2 or higher, PAC Project Pro R8.2 or higher, and a SNAP PAC controller)—Frequency is the speed with which a digital point changes state and is usually measured in counts per second. For example, reading the frequency can help you determine the speed of rotating machinery. Period refers to the elapsed time for a complete on-off-on transition on a digital point. Measurement starts on the first transition (either off-to-on or on-to-off) and stops on the next transition of the same type.
Digital totalizing	(Digital input; requires firmware R8.2 or higher, PAC Project Pro R8.2 or higher, and a SNAP PAC controller)—For a digital input, a totalizer accumulates the total amount of time that a digital input is on (or off). The on-time totalizer shows how long the point has been on; the off-time totalizer shows how long the point has been off. Totalizers are often used to determine maintenance or use schedules.
Pulse and square wave generation	(Digital output; requires firmware R8.2 or higher, PAC Project Pro R8.2 or higher, and a SNAP PAC controller)—A pulse turns a digital output on (or off) briefly, either once or for a specified number of times at a specified interval. A digital square wave is a specific pattern of on and off states, repeated continuously.
Time-proportional output (TPO)	Time-proportional output varies the duty cycle and the percentage of on time within that cycle. TPO is often combined with a PID loop and used to control the output, for example in a heater or oven. (Digital output)—Requires firmware R8.2 or higher, PAC Project Pro R8.2 or higher, and a SNAP PAC controller. (Analog output)—Requires a SNAP-AOD-29 module.

Feature	Description
Watchdog	(Digital and analog input and output)—A watchdog monitors communication with the PC or other host device. If the host does not write data to the I/O unit for the length of time set in the watchdog, the I/O unit automatically sets designated digital and analog output points to the values you have determined. If communication fails between the host and the brain controlling a process, a watchdog makes sure the process is automatically brought to a safe state. For example, a valve could automatically close to avoid completely emptying a tank.
Scaling	(Analog input and output)—Analog input and output points can be scaled as needed. For example, you can scale a -5 V to +5 V input point to reflect 0% to 100%
Minimum and maximum values	(Analog input)—Minimum and maximum values are sometimes called peaks and valleys. You can read these values at any time, for example, to record minimum and maximum temperatures. You can also reset min/max values. For example, if you want to record the maximum temperature at point 2 in each 24-hour period, you must reset the values after they are read each day.
Thermocouple linearization	(Analog input)—The brain automatically converts the thermocouple junction's millivolt values into temperature values, so you don't have to. Choose the appropriate module and make sure you configure the point as the correct thermocouple type (E, K, etc.) for your purpose.
Offset and gain	(Analog input)—Offset and gain calculations are used to calibrate analog points. If a -50 mV to +50 mV input receives signals that are slightly off (not exactly -50 mV at the lowest point, for example), the offset and gain can be calculated so that values will appear accurately when read.
Clamping	(Analog output)—Clamping limits values that can be sent to analog output points so they do not go above or below a specific value. For example, if you are using a 0–10 VDC output module, but the device attached to one of its points can only handle a maximum of 5 VDC, you can set an upper clamp of 5 VDC for that point. The values for upper and lower clamp are set in engineering units.
Analog totalizing	(Analog input; requires firmware R8.2 or higher, PAC Project R8.2 or higher, and a SNAP PAC controller) For an analog input, a totalizer accumulates readings by sampling the input point at set intervals and storing the total value, for example to determine total flow based on a varying flow rate signal.
Ramping	(Analog output; requires firmware R8.2 or higher, PAC Project R8.2 or higher, and a SNAP PAC controller)—Some devices attached to analog outputs should not be abruptly stepped up or down, because a sudden change might damage the equipment or cause other problems. Instead, you can gradually ramp the device up or down to the desired value.
PID loop control	(Analog points)—Proportional integral derivative (PID) loops are used to drive an input toward a particular value (the setpoint) and keep the input very close to that value by controlling an output. PID loops are often used in temperature control.
Average filter weight	(Analog inputs)—A filter weight smooths analog input signals that are erratic or change suddenly. See the PAC Manager User's Guide (form 1704) for details.

Feature	Description
Events, Event Messages, Email, Data Logging	<p>You can configure a SNAP PAC brain to recognize one or a combination of the following as an event:</p> <ul style="list-style-type: none"> • The state of a point on a 4-channel digital module (on or off) • A specific high or low value of an analog point, in Engineering Units • A number on a digital counter or a high or low number on a quadrature counter • An analog point value or a quadrature counter that is outside an allowable range • The state of a bit in the Scratch Pad (on or off) • A specific string received by a serial module (SNAP PAC Ethernet brains only) <p>The brain can react automatically to an event in any or all of the following ways:</p> <ul style="list-style-type: none"> • Turning points on 4-channel digital modules on or off (same or different brain, immediately or delayed) • Copying data from one memory map location to another (same or different brain) • Logging data • Turning a bit in the Scratch Pad on or off • Sending a stream packet, an email message, or an SNMP trap (SNAP PAC Ethernet brains only) • Sending a string through a serial module to a serial device (SNAP PAC Ethernet brains only)
Security	<p>(SNAP PAC Ethernet brains only) You can limit access to Ethernet brains either by allowing access only from specific computers or other devices on the network (IP filtering), or by limiting access to specific protocols, such as SNMP, that are used with the brain (port access).</p>
Scratch Pad Areas	<p>The Scratch Pad is used primarily for peer-to-peer communication with other SNAP PAC brains and controllers on the network. See the <i>PAC Control User's Guide</i>.</p>
SNMP	<p>(SNAP PAC Ethernet brains only) The Simple Network Management Protocol (SNMP) is used to communicate with an SNMP-based enterprise management system, such as Computer Associates' Unicenter, Hewlett-Packard's OpenView, or IBM's Tivoli. These systems can manage analog, digital, or serial devices through a SNAP PAC Ethernet brain just as they manage computer equipment on the Ethernet network. The brain is compatible with SNMP v2.0c using brain firmware R8.2a or higher.</p>
FTP Server	<p>(SNAP PAC Ethernet brains only) SNAP PAC Ethernet brains have a substantial area available for file storage, and data can be easily moved to and from these files using FTP. For details about the file system, see the <i>PAC Manager User's Guide</i> (form 1704).</p>

SNAP PAC BRAIN COMPARISON CHART

4: Maintenance and Troubleshooting

INTRODUCTION

This chapter includes the following maintenance and troubleshooting information:

Maintenance

Backup Battery	below
Changing an Ethernet Brain's IP Address	page 34
Resetting a SNAP PAC Brain	page 34
Loading New Firmware	page 34
Setting Time and Date	page 34
Blink Codes	page 35

Troubleshooting

Getting Device and Firmware Information	page 37
Communicating with an EB Brain	page 39
Communicating with an SB Brain	page 42
Additional Troubleshooting Tools	page 45

MAINTAINING THE SNAP PAC BRAIN

Backup Battery

The real-time clock in the SNAP PAC brain uses a backup battery. This battery is rechargeable and receives a charging current whenever the brain has power. The battery lasts for up to 10 years when power is off.

SNAP PAC EB brains manufactured before July 1, 2007 use a CR2032 lithium backup battery, which is user replaceable. These batteries are readily available in retail stores.

Changing an Ethernet Brain's IP Address

If you know the brain's IP address and need instructions to change it, see the [PAC Manager User's Guide](#) (form 1704). If you're using the brain with an Allen-Bradley system, see the [EtherNet/IP for SNAP PAC Protocol Guide](#) (form 1770).

If you do not know the IP address, first check the label on the side of the brain. If you still don't know the brain's IP address, follow the steps in the next section to restore the brain to factory default settings, and then assign an IP address as described in the [PAC Manager User's Guide](#) and the [EtherNet/IP Guide](#).

Resetting a SNAP PAC Brain

1. Carefully insert a straightened paperclip or stiff wire into the small hole labeled RESET.
2. Depending on the type of reset you need, press and hold down the RESET button as described below. DO NOT hold the button down too long.

NOTE: Do not reset the brain to hardware test mode unless Opto 22 Product Support tells you to.

Reset type	How to use the reset button	What happens	Notes
Simple reset	Press and release immediately	Brain restarts. Files in RAM are erased. Files in flash memory are untouched.	
Restore factory defaults	Press just until STAT LED turns solid green (1-2 sec)	Brain restarts. Files in RAM and flash memory are erased. I/O configuration in flash is erased. IP address is reset to 0.0.0.0 and subnet mask to 255.255.255.0.	You have to reassign the IP address and subnet mask.
Failsafe bootloader mode	Press and wait until LED turns solid green. Release when LED starts to blink (2-5 sec)	Brain restarts. Files in RAM are erased. Files in flash memory are untouched.	Cycle power to recover. Result is the same as a simple reset.
Hardware test mode	Press and hold until LED starts blinking orange rapidly and continuously (> 5 sec)	Brain restarts. Files in RAM and flash memory are erased. I/O configuration in flash is erased. IP address is reset to 0.0.0.0 and subnet mask to 255.255.255.0.	Cycle power to recover. Result is the same as restoring to factory defaults. You have to reassign the IP address and subnet mask.

Loading New Firmware

Each SNAP PAC brain contains firmware (sometimes referred to as the *kernel*), which is similar to an operating system. If the firmware should become damaged, or if a new version of the firmware is released, you can load new firmware to the brain following instructions in the [PAC Manager User's Guide](#) (form 1704).

Setting Time and Date

The SNAP PAC brain's built-in clock is set at the factory. To change the time and date, see instructions in the [PAC Manager User's Guide](#) (form 1704).

Blink Codes

LEDs on the top of a SNAP PAC brain use blink codes to indicate operation and status. For the location of LEDs, see [“LEDs and Network Interfaces—Ethernet Brains \(Obsolete\)” on page 26](#) or [“LEDs and Network Interfaces—Serial Brains \(Obsolete\)” on page 27](#). Blink codes provide useful information during operation and in troubleshooting.

Self-Test LED Sequence at Startup

When you first turn on the brain, you’ll see the following LED sequence. This is a self test.

Duration (seconds)	MS LED	NS LED
0.25	Green	Off
0.25	Red	Off
0.25	Green	Green
0.25	Green	Red
0.25	Off	Off
0.25	On	Flash On

Normal LED Behavior: MS and NS LEDs

Once the self-test is finished, normal LED behavior is as shown in the following tables.

MS LED—Applies only when using EtherNet/IP

LED	Description
Steady Off	No power
Steady Green	Operational. Device has been configured and can operate normally.
Flashing Green	Standby. Device does not have a valid IP configuration.
Flashing Red	Minor fault. A recoverable fault has occurred.
Steady Red	Major fault. A non-recoverable fault has occurred.

NS LED

LED	Description
Steady Off	The device does not have a valid IP address or has no power.
Flashing Green	EtherNet/IP only: No connections
Steady Green	EtherNet/IP only: Connected
Flashing Red	EtherNet/IP only: Connection Timeout

STAT LED—Green

If the STAT LED is on and remains green, the brain is operating normally. On an EB brain, a solid green LED indicates that the brain has an IP address.

If the STAT LED blinks green when the brain starts up, it indicates the following:

Number of Blinks	Speed of Blinks	Means
2	fast	Normal; the brain's firmware is starting up.
5	fast	Default settings have been successfully restored.
7	fast	Entering failsafe bootloader mode. For details, see "Resetting a SNAP PAC Brain" on page 34 .

STAT LED—Orange

On an EB brain, if the STAT LED blinks orange about four times a second, the device is attempting to obtain an IP address by sending BootP requests.

On an SB brain, you can enable special orange blink codes to troubleshoot communication. See [page 43](#) for more information.

On both EB and SB brains, if the STAT LED blinks orange fast and continuously after you pushed the RESET button, the device is in hardware test mode (see [page 34](#)).

STAT LED—Red and Green

If the STAT LED blinks red and green alternately, it indicates that the brain is in failsafe bootloader mode. See ["Resetting a SNAP PAC Brain" on page 34](#) for more information.

STAT LED—Red

If the STAT LED blinks red, it indicates the following:


Number of Blinks	Speed of Blinks	Means	Problem and Workaround
4	slow	(SB brain) Incorrect serial settings (Both brains) Invalid MAC address or hardware revision	(SB brain) Check serial settings (See page 8 .) Contact Product Support.
5	slow	Fatal error	Firmware or hardware problem. Check the power supply and connections before restarting. Call Product Support if the error is repeated.
6	slow	RAM error	Contact Product Support.
7	slow	Ethernet switch failure	(EB brain only) Contact Product Support.
11	slow	Ethernet loopback test failure	(EB brain only) Contact Product Support.
13	slow	Real-time clock failure	Contact Product Support.
16	slow	Serial flash failure	Contact Product Support.
20	slow	Digital failure	Contact Product Support.
21	slow	Bus failure	Contact Product Support.

GETTING DEVICE AND FIRMWARE INFORMATION


If you need to contact Opto 22 Product Support for assistance, it's helpful to have device and firmware information at hand before you call us. Here's how to get that information for SNAP PAC brains:

1. Start PAC Manager.

Click the Windows Search button and type PAC Manager 10.0.

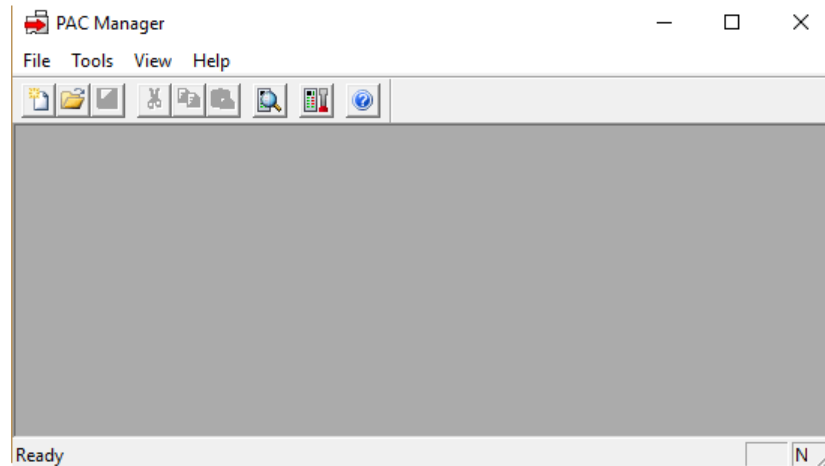


2. In the PAC Manager main window, click the Inspect button .

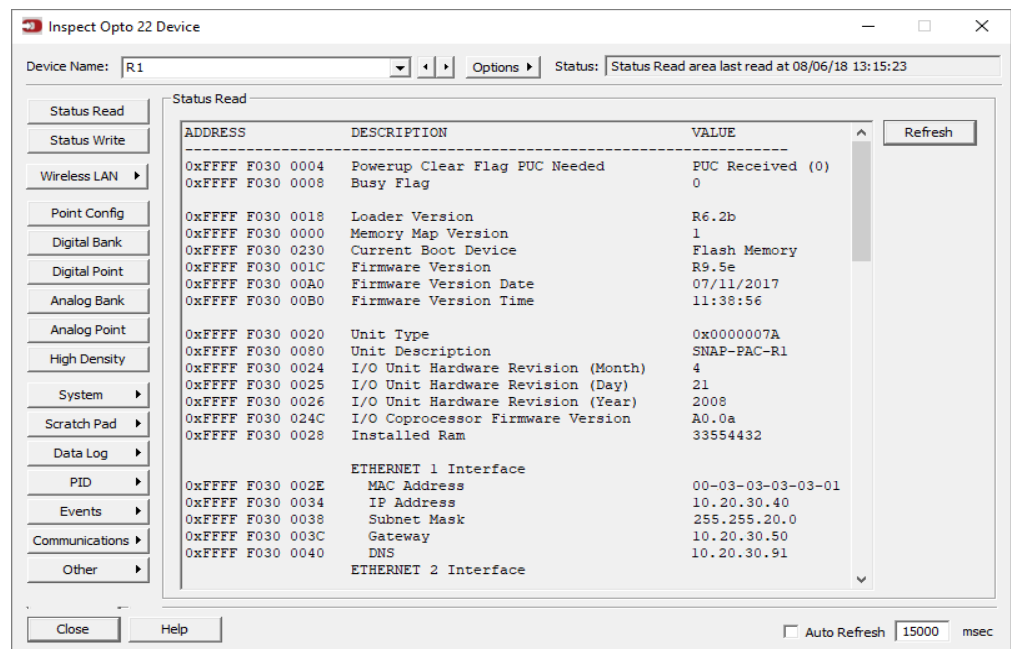

3. In the Device Name field, enter the name of the brain (usually the I/O unit name configured in PAC Control) or choose the name from the drop-down list.
4. If the brain has already been defined in PAC Manager, skip to [step 7](#).
If the brain has not been defined, the Add New Device dialog box appears.

5. Choose the Connection Type.
 - a. For an EB brain, click Direct Connection to Ethernet Device.
 - Enter the IP address of the brain.
 - Leave the Ethernet port at 2001 unless you have changed it on the brain.
 - b. For an SB brain connected directly to a PC (not to a controller), click Direct Connection to Serial Device.
 - Make sure the PC's port is correct and that the baud rate matches that of the brain.
 - Enter the brain's address.
 - c. For an SB brain connected to a SNAP PAC controller, click Pass-Through Ethernet Controller to Serial Device.
 - Enter the IP address of the controller.
 - Leave the controller's Ethernet port as 2001 unless you have changed it.
 - Enter the controller's serial port. On a SNAP-PAC-S1 controller, choose Serial 2. On a SNAP-PAC-S2, choose the port the brain is connected to.
 - Make sure the controller's baud rate matches that of the brain.
 - Enter the brain's address. If you are using a 2-wire connection, check 2-Wire RS-485.
 - d. If network timing isn't working, change the Timeout value in the upper right.
6. Click OK.
7. In the Inspect Opto 22 Device window, click the Status Read button in the upper left. Information from the brain is displayed in the window.

In this example, we configured a SNAP-PAC-SB1 using a Pass-Through connection.

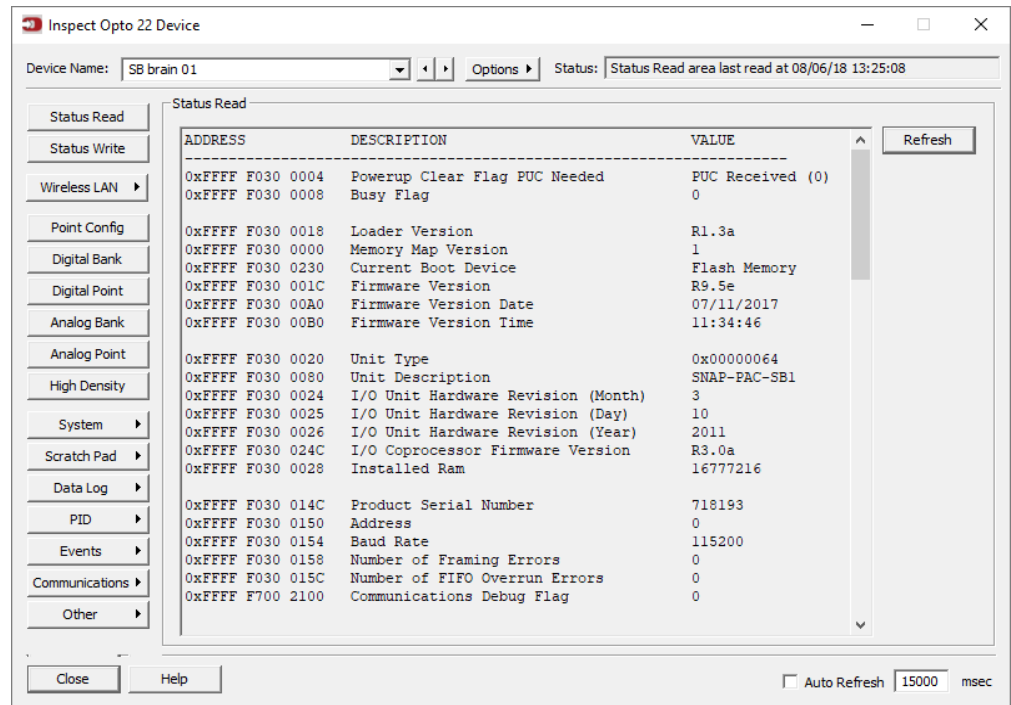

Keep this window open on your screen when you call Product Support.

For explanations of the data shown, see the [PAC Manager User's Guide](#) (form 1704).

TROUBLESHOOTING SNAP PAC BRAINS

If you encounter a problem while installing or using SNAP PAC brains, these sections may help.

- For SNAP PAC **EB** brains, see the next section.
- For SNAP PAC **SB** brains, see [page 42](#).

If you need to contact Opto 22 Product Support, see [“For Help” on page 4](#).

Communicating with an EB Brain

If you attempt to connect to the brain using its IP address and you cannot, first check the following:

- Make sure the brain has been turned on and the LNK and STAT LEDs for the connected Ethernet interfaces are lit (see [“LEDs and Network Interfaces—Ethernet Brains \(Obsolete\)” on page 26](#).)
- If the brain has been networked in a daisy-chain configuration, check to see if another brain in the chain has lost power. Also make sure all network connections are correct. (See [“Using SNAP PAC Ethernet Brain Network Interfaces” on page 24](#).)
- Make sure the brain's hold-down screw has been tightened so that it is firmly attached to the rack. (Do not overtighten.)
- Verify that you typed in the correct address for the brain. Check the label on the side of the brain, where the IP address should be written.
- Make sure the brain has been assigned a valid IP address and subnet mask. SNAP PAC brains come from the factory with a default IP address of 0.0.0.0, which is invalid. The default subnet mask is 255.255.255.0. To assign an IP address and subnet mask, see the [PAC Manager User's Guide](#) (form 1704).

- Make sure that no red LEDs on the brain are lit. A red LED could indicate a voltage supply problem. Each brain should have its own power supply. The brain needs a minimum of 5.0 VDC, measured at the rack.
- Make sure you have up-to-date drivers installed on your computer's Network Interface Card (NIC). Contact your system administrator or the manufacturer of the card for help.
- Make sure you have Administrator privileges on your computer and that any firewall in the computer is temporarily disabled before you try to assign or change IP addresses, load firmware using PAC Manager's Maintenance window, or work with files on the brain. BootP and FTP cannot function through a firewall in the PC. Firewalls in a router are less likely to be a problem.

Pinging the Brain

If you still cannot communicate with the brain after you have checked these items, try to reach it using the PING protocol.

1. Choose Start > Programs > Accessories and open a command prompt window.
2. At the prompt, type: `ping [brain's IP address]`
For example, type: `ping 10.192.54.40`

If the brain responds, go to [“Accessing the Ethernet Brain with PAC Manager” on page 40.](#)

If the PING command cannot be found, choose Start > Control Panel > Network. Make sure TCP/IP is configured as a protocol and that an IP address and subnet mask are assigned.

If you see the message “Destination host route not defined,” the brain probably has an inappropriate IP address and subnet mask. Make sure the IP address and subnet mask on the brain are compatible with those on the computer. Follow the directions beginning on [page 34](#) to check the IP address and subnet mask on the brain, and change them if necessary.

If you see the message “No response from host,” check the following:

- Are the computer and brain correctly connected? Is the brain turned on?
- Are the IP address and subnet mask on the brain compatible with those on the computer?
- Is the brain in reset mode? (Check for a blinking STAT LED. STAT blink codes are shown on [page 35.](#))


If you still cannot ping the brain, contact Opto 22 Product Support. (See [page 4.](#))


Accessing the Ethernet Brain with PAC Manager

Once you know you can ping the brain, try to access it using PAC Manager. You will need to know the brain's IP address.


1. Start PAC Manager.

Click the Windows Search button and type PAC Manager 10.0.

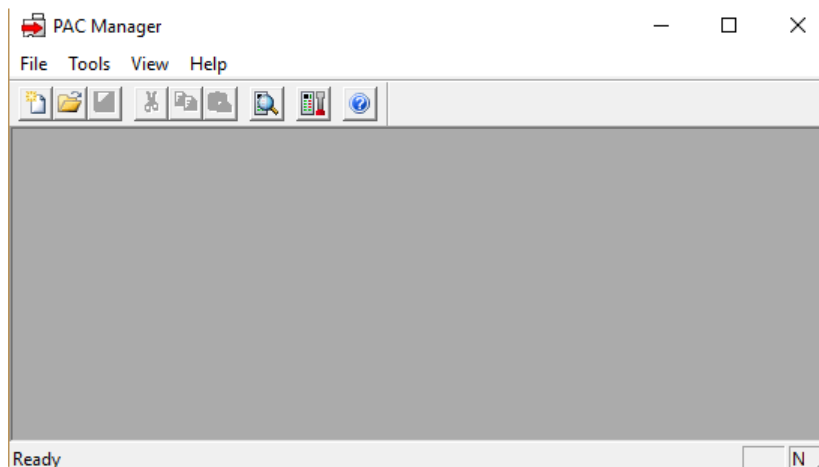

- In the PAC Manager main window, click the Inspect button .
- In the Device Name field, enter the name of the brain or choose the name from the drop-down list. (You can also type in the brain's IP address.)
- Click Status Read.

Information from the brain is displayed in the window:

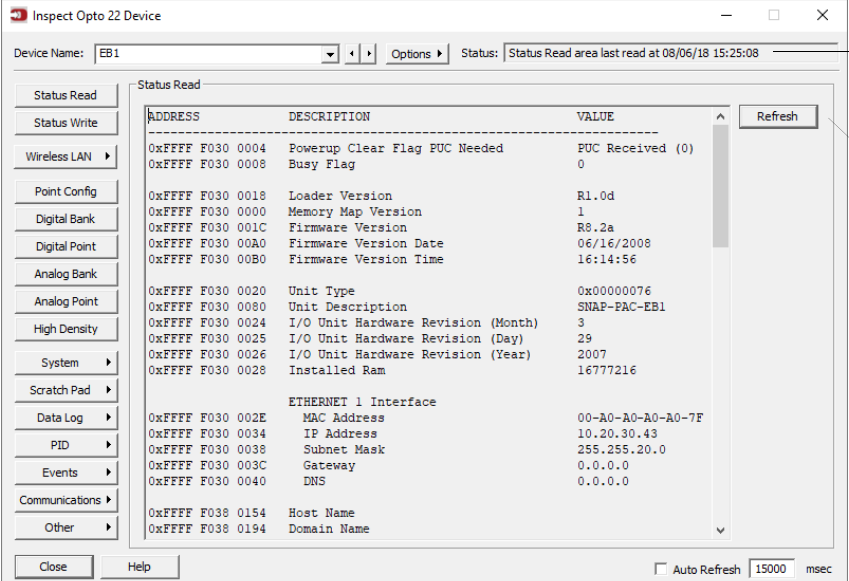

The screenshot shows the 'Inspect Opto 22 Device' window. At the top, the 'Device Name' is 'EB1' and the 'Status' is 'Status Read area last read at 08/06/18 15:25:08'. The main area is a table with columns 'ADDRESS', 'DESCRIPTION', and 'VALUE'. A 'Refresh' button is located to the right of the table. Annotations indicate that the date and time data was last read and that the refresh button is used to update data.

ADDRESS	DESCRIPTION	VALUE
0xFFFF F030 0004	Powerup Clear Flag PUC Needed	PUC Received (0)
0xFFFF F030 0008	Busy Flag	0
0xFFFF F030 0018	Loader Version	R1.0d
0xFFFF F030 0000	Memory Map Version	1
0xFFFF F030 001C	Firmware Version	R8.2a
0xFFFF F030 00A0	Firmware Version Date	06/16/2008
0xFFFF F030 00B0	Firmware Version Time	16:14:56
0xFFFF F030 0020	Unit Type	0x00000076
0xFFFF F030 0080	Unit Description	SNAP-PAC-EB1
0xFFFF F030 0024	I/O Unit Hardware Revision (Month)	3
0xFFFF F030 0025	I/O Unit Hardware Revision (Day)	29
0xFFFF F030 0026	I/O Unit Hardware Revision (Year)	2007
0xFFFF F030 0028	Installed Ram	16777216
ETHERNET 1 Interface		
0xFFFF F030 002E	MAC Address	00-A0-A0-A0-A0-7F
0xFFFF F030 0034	IP Address	10.20.30.43
0xFFFF F030 0038	Subnet Mask	255.255.20.0
0xFFFF F030 003C	Gateway	0.0.0.0
0xFFFF F030 0040	DNS	0.0.0.0
0xFFFF F038 0154	Host Name	
0xFFFF F038 0194	Domain Name	

If information does not appear, contact Product Support. (See [page 4](#).)


Solving Ethernet Network Problems


If there are recurring problems in communicating with the brain, check your network. The cables, routers, and so on in your Ethernet network are not part of the Opto 22 hardware, but any problems in your network may affect communication with Opto 22 products.

Create a Network Diagram—First, create a network diagram and verify the following:

- Cable connectors are firmly inserted.
- The Ethernet network switch has power. Switch LEDs indicate that the connection is up. If SNAP PAC brains are daisy-chained, LNK LEDs for both of their Ethernet interfaces are lit.
- Neither the PC nor the brain uses the switch's uplink port.
- The two switched network interfaces on the brain are being used correctly and are not creating a loop anywhere in the network (see ["Using SNAP PAC Ethernet Brain Network Interfaces"](#) on page 24).
- The brain's LNK LED(s) are lit.

Check Ethernet Errors—Next, use PAC Manager to check Ethernet errors reported by the brain. These errors indicate network problems. You will need to know the brain's device name (usually the same as the I/O unit in PAC Control) or its IP address.

- Choose Start > Programs > Opto 22 > PAC Project Software > PAC Manager.
- In the PAC Manager main window, click the Inspect icon .
- In the Device Name field, type the brain's name (or IP address). Click Status Read.
- Scroll down until you see the items Ethernet Errors: Late Collisions, Ethernet Errors: Excessive Collisions, and Ethernet Errors: Others.

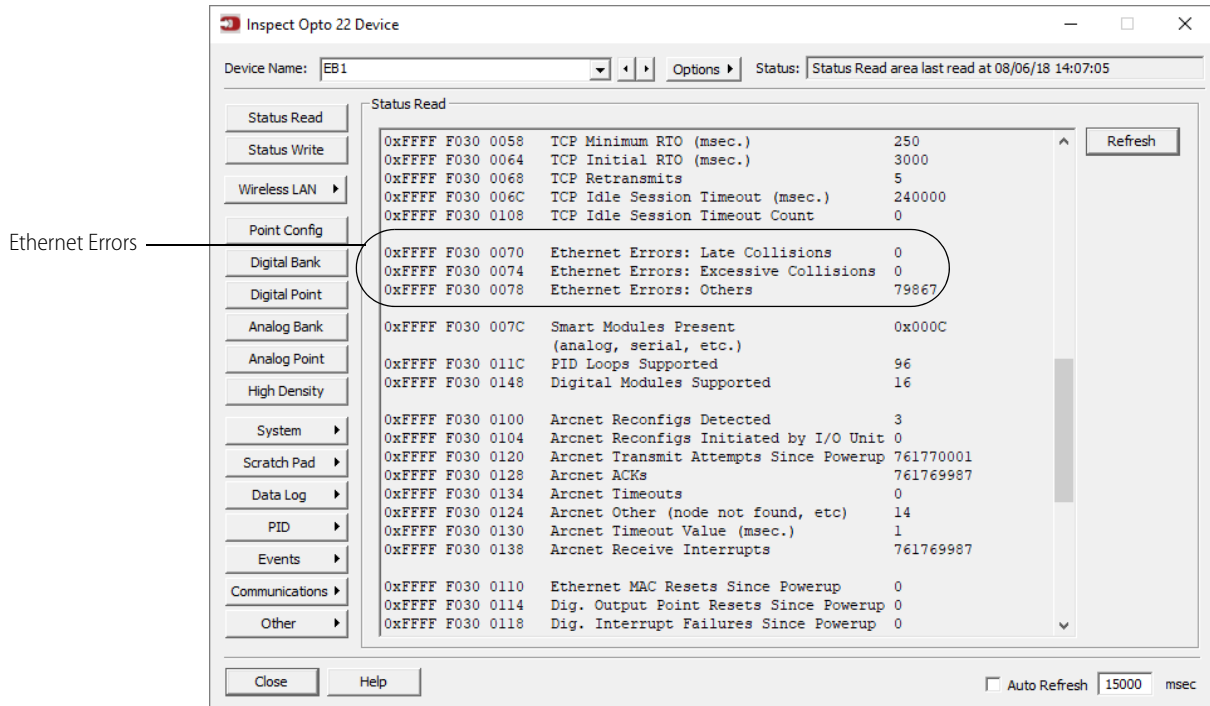

All three of these items should have a value of zero. If any of these items has a value other than zero, you may have a network problem.

Analyze Communication Packets—If it appears that you have network problems, you can use a utility program such as Wireshark (www.wireshark.org) to log and analyze network communication packets.

Have Your Network Certified—If you suspect network problems, you may need to have your network professionally certified. Opto 22 does not offer network validation or certification services, but many network hardware manufacturers do. Contact the manufacturer of your Ethernet network hardware to have them diagnose, fix, and certify your network.

If you continue to have problems communicating with the SNAP PAC brain after your network is certified, contact Opto 22 Product Support. (See [page 4](#).)

Communicating with an SB Brain

If you are having trouble communicating with the SNAP PAC serial brain, check the following:

- Make sure the brain has been turned on and that the STAT LED is lit (green).
- Make sure the brain's hold-down screw has been tightened so that it is firmly attached to the rack. (Do not overtighten.)
- If you're accessing the brain through a SNAP PAC S-series controller, make sure you can communicate with the controller over Ethernet. For help, see the [SNAP PAC S-Series Controllers User's Guide](#) (form 1592).
- Check physical connections between the controller or PC and the brain.
- Verify that the following serial parameters on the controller or PC and the brain correspond: baud rate, address, 2-wire or 4-wire connections.
- Make sure termination switches are set correctly for all brains on the serial network.
- Make sure that power to the brain is sufficient. Each brain should have its own power supply. The brain needs a minimum of 5.0 VDC, measured at the rack.

Timeout Errors when Communicating via a Controller

- To avoid timeout issues when communicating from a controller to a serial brain, you should configure matching turnaround delays in both the controller and the brain. (Turnaround delays are typically required at 9600 baud—and sometimes needed at higher baud rates when your RS-485/422 bus is using repeaters.)
 - Configure the controller's turnaround time in PAC Manager > Tools > Inspect > Status Write button > Turn-Around Delay for Port <#> (msec).
<#> represents the port number that the controller is using to connect to the brain.
 - Configure the same turnaround time for the brain in PAC Manager > Tools > Inspect > Status Write button > Turn-Around Delay for Port <#> (msec).

The amount of turnaround time you'll need depends on the RS-485 cable connecting the devices (turnaround time increases with the length of the cable). Start with a 1 millisecond delay, and then, if you're still experiencing issues, increase the turnaround time until the connection is satisfactory.

- If you get a timeout error when trying to establish communication between an S-series controller and a serial brain (for example, a SNAP-PAC-SB2), the problem could be configuration-related.
 - If you get the error when trying to run a PAC Control strategy, make sure that the baud rate on the brain's Baud Rate Switch is the same as the baud rate configured in your PAC Control strategy (File > Strategy Options > Serial I/O Ports tab). For example, if the brain's baud rate is set at 115,200 Kbs, then the serial I/O (RS-485) port in your strategy must also be configured for 115,200 Kbs.
 - If you get a timeout error when using PAC Manager to communicate with the brain via a controller:
 - a. Check that the baud rate setting on the brain is the same as the baud rate configured in PAC Manager (Tools > Inspect > Communications > PPP Configure > Serial Port Speed).
 - b. If that doesn't solve the problem, then make sure the brain's baud rate setting is the same as the baud rate in the controller's strategy (File > Strategy Options > Serial I/O Ports tab).
When you've configured the same baud rate for the brain, the strategy, and PAC Manager, you then need to cycle power to the controller. Cycling power releases a lock previously put on the configured communication port, and allows the new connection to succeed.


Turning on Communication Error Blink Codes (Serial Brain)

To troubleshoot communication with the SB brain, you can turn on communication error blink codes following the steps below.


NOTE: Turn on blink codes only for debugging purposes; they will degrade performance.

1. Start PAC Manager.

Click the Windows Search button and type PAC Manager 10.0.

2. In the PAC Manager main window, click the Inspect button .
3. In the Device Name field, enter the name of the SB brain or choose it from the drop-down list (for help, see [page 37](#)).
4. Click the Status Write button.

- Click the Value field for Communication Error Blink Codes.

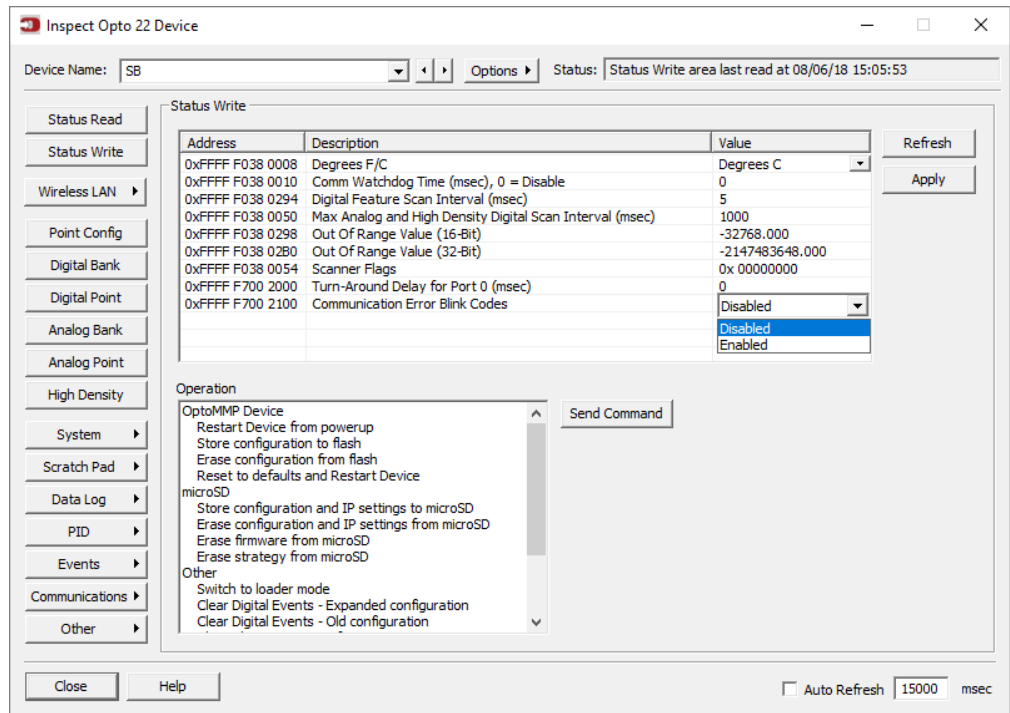

- From the drop-down list, choose Enabled. Click the Apply button.

Once you've turned on communication error blink codes, the STAT LED blinks orange (a combination of red and green) to indicate the following:

Number of Blinks	Speed of Blinks	Means
2	fast	Serial communication CRC error
3	fast	Incorrect serial packet type
4	fast	Malformed serial packet. Did not receive entire packet.
5	fast	OptoMMP application error
6	fast	UART Receive error
7	fast	UART Send error
8	fast	Packet address doesn't match brain's address

IMPORTANT: Don't forget to disable communication error blink codes when you've finished troubleshooting.

ADDITIONAL TROUBLESHOOTING TOOLS

Making Sure the Brain is in Normal Mode

If you are having trouble communicating with the brain, it might be in *failsafe bootloader mode* or *hardware reset mode*. The brain restarts in one of these modes if you hold down the RESET button longer than the time needed to restore default settings. For more information on using the RESET button, see “Resetting a SNAP PAC Brain” on page 34.

- *Failsafe bootloader mode* is a diagnostic mode you normally use only when an Opto 22 Product Support engineer suggests it. You’ll know if the brain is in this mode because the STAT LED blinks green seven times, quickly. If your brain restarts in failsafe bootloader mode, simply cycle power to the device. The brain will restart, and you should be able to communicate with it.
- The brain enters *hardware reset mode* if you hold down the RESET button for more than five seconds. At that point the STAT LED blinks orange quickly and continuously. This mode erases any files in RAM and flash memory and puts the brain into a continuous testing loop. If your brain is in hardware reset mode, cycle power to it, and it will restart as if you had reset it to factory defaults. On an EB brain, you’ll need to reassign an IP address and subnet mask.

TCP Settings (Ethernet Brains)


Retransmit timeout (RTO) refers to the length of time the controller waits while communicating before timing out. The RTO is determined by the controller’s TCP/IP stack, and the stack continually recalculates the RTO based on recent network traffic. If the network becomes busier, for example, the stack automatically adjusts the RTO to a higher value.


If the TCP/IP stack times out while trying to transmit data, it doubles the current RTO and tries again. This process continues for five retries; after that, the device stops trying and sends a timeout message.

If you are receiving frequent timeout messages from the device, you can change the TCP parameters in PAC Manager.

1. Start PAC Manager:

Click the Windows Search button and type PAC Manager 10.0.

2. In the PAC Manager main window, click the Inspect icon .
3. In the Device Name field, type the name or IP address of the controller. Then, click Status Write.

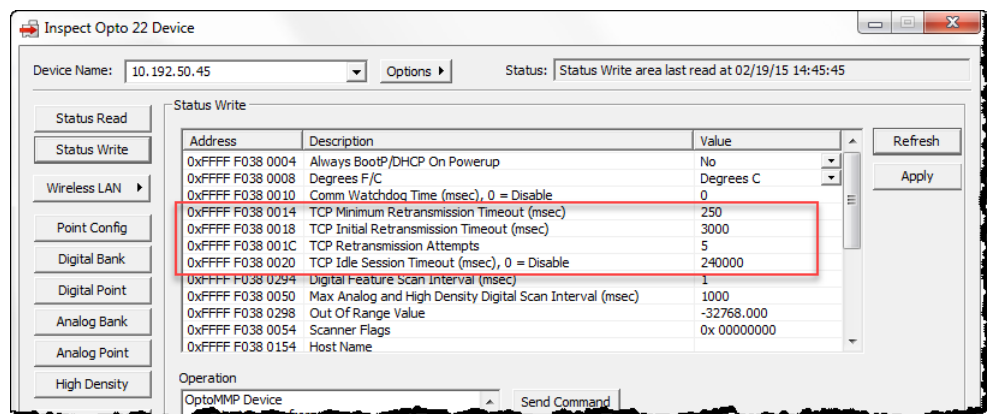

CAUTION: Note the following recommended settings:

TCP Minimum Retransmission Timeout (msec):	250
TCP Initial Retransmission Timeout (msec):	3000
TCP Retransmission Attempts:	5
TCP Idle Session Timeout (msec):	240,000

If you set these fields too low, you may not be able to communicate with the device at all—even through PAC Manager—to fix the settings. Then you would have to reset the controller to factory defaults.

4. Change these four fields as necessary:
 - Minimum RTO** sets an absolute minimum value for the RTO. The device’s calculated RTO will never go below this value.
 - Initial RTO** sets the RTO for the first communication try. Be careful: since all future tries are based on this value, if you set it too low for network conditions, a connection will never be made.
 - TCP Retransmits** sets the number of times the device retries communication. Larger, busier networks need a higher number of retransmits than smaller networks with less traffic.
 - TCP idle session timeout** sets how long (in milliseconds) the device allows a session to remain open without any activity. After this time, the device checks the session to make sure it is still good, and closes it if it is not. The default is 240,000 milliseconds, or four minutes.
5. Click the Apply button to write your changes to the controller.
6. In the Operation Commands list, highlight Store configuration to flash. Click Send Command.
7. In the Operation Commands list, highlight Restart brain from powerup. Click Send Command. The new TCP parameters are set.

A: Serial Cables and Addressing

SERIAL CABLES

The following cables are recommended for RS-485 serial communications. Although you may elect to use other cables, keep in mind that low capacitance (less than 15 pF/ft.) is important for high-speed digital communication links. The cables listed below are all 24-gauge, 7x32 stranded, with 100 ohm nominal impedance and a capacitance of 12.5 pF/ft.

Select from the following two-, three-, and four-pair cables, depending on your application needs. All will yield satisfactory results. We recommend that you choose a cable with one more pair than your application requires. Use one of the extra wires, rather than the shield, for the common.

Two-Pair:

Belden P/N 8102 (with overall shield)
Belden P/N 9729 (individually shielded)
Belden P/N 8162 (individually shielded with overall shield)
Manhattan P/N M3475 (individually shielded with overall shield)
Manhattan P/N M39249 (individually shielded with overall shield)

Three-Pair:

Belden P/N 8103 (with overall shield)
Belden P/N 9730 (individually shielded)
Belden P/N 8163 (individually shielded with overall shield)
Manhattan P/N M3476 (individually shielded with overall shield)
Manhattan P/N M39250 (individually shielded with overall shield)

Four-Pair:

Belden P/N 8104 (with overall shield)
Belden P/N 9728 (individually shielded)
Belden P/N 8164 (individually shielded with overall shield)
Manhattan P/N M3477 (individually shielded with overall shield)
Manhattan P/N M39251 (individually shielded with overall shield)

ADDRESS TABLE

Serial addresses from 0–255 can be used for serial-based SNAP PAC brains. The brain's address is set using the two rotary switches on the top of the brain, as shown on [page 8](#). The table on the following page shows switch settings for each address.

Serial Address Table—SNAP PAC SB Brains

0	0	0	0	0	32	20	2	0	64	40	4	0	96	60	6	0	128	80	8	0	160	A0	A	0	192	C0	C	0	224	E0	E	0
1	1	0	1		33	21	2	1	65	41	4	1	97	61	6	1	129	81	8	1	161	A1	A	1	193	C1	C	1	225	E1	E	1
2	2	0	2		34	22	2	2	66	42	4	2	98	62	6	2	130	82	8	2	162	A2	A	2	194	C2	C	2	226	E2	E	2
3	3	0	3		35	23	2	3	67	43	4	3	99	63	6	3	131	83	8	3	163	A3	A	3	195	C3	C	3	227	E3	E	3
4	4	0	4		36	24	2	4	68	44	4	4	100	64	6	4	132	84	8	4	164	A4	A	4	196	C4	C	4	228	E4	E	4
5	5	0	5		37	25	2	5	69	45	4	5	101	65	6	5	133	85	8	5	165	A5	A	5	197	C5	C	5	229	E5	E	5
6	6	0	6		38	26	2	6	70	46	4	6	102	66	6	6	134	86	8	6	166	A6	A	6	198	C6	C	6	230	E6	E	6
7	7	0	7		39	27	2	7	71	47	4	7	103	67	6	7	135	87	8	7	167	A7	A	7	199	C7	C	7	231	E7	E	7
8	8	0	8		40	28	2	8	72	48	4	8	104	68	6	8	136	88	8	8	168	A8	A	8	200	C8	C	8	232	E8	E	8
9	9	0	9		41	29	2	9	73	49	4	9	105	69	6	9	137	89	8	9	169	A9	A	9	201	C9	C	9	233	E9	E	9
10	A	0	A		42	2A	2	A	74	4A	4	A	106	6A	6	A	138	8A	8	A	170	AA	A	A	202	CA	C	A	234	EA	E	A
11	B	0	B		43	2B	2	B	75	4B	4	B	107	6B	6	B	139	8B	8	B	171	AB	A	B	203	CB	C	B	235	EB	E	B
12	C	0	C		44	2C	2	C	76	4C	4	C	108	6C	6	C	140	8C	8	C	172	AC	A	C	204	CC	C	C	236	EC	E	C
13	D	0	D		45	2D	2	D	77	4D	4	D	109	6D	6	D	141	8D	8	D	173	AD	A	D	205	CD	C	D	237	ED	E	D
14	E	0	E		46	2E	2	E	78	4E	4	E	110	6E	6	E	142	8E	8	E	174	AE	A	E	206	CE	C	E	238	EE	E	E
15	F	0	F		47	2F	2	F	79	4F	4	F	111	6F	6	F	143	8F	8	F	175	AF	A	F	207	CF	C	F	239	EF	E	F
16	10	1	0		48	30	3	0	80	50	5	0	112	70	7	0	144	90	9	0	176	B0	B	0	208	D0	D	0	240	F0	F	0
17	11	1	1		49	31	3	1	81	51	5	1	113	71	7	1	145	91	9	1	177	B1	B	1	209	D1	D	1	241	F1	F	1
18	12	1	2		50	32	3	2	82	52	5	2	114	72	7	2	146	92	9	2	178	B2	B	2	210	D2	D	2	242	F2	F	2
19	13	1	3		51	33	3	3	83	53	5	3	115	73	7	3	147	93	9	3	179	B3	B	3	211	D3	D	3	243	F3	F	3
20	14	1	4		52	34	3	4	84	54	5	4	116	74	7	4	148	94	9	4	180	B4	B	4	212	D4	D	4	244	F4	F	4
21	15	1	5		53	35	3	5	85	55	5	5	117	75	7	5	149	95	9	5	181	B5	B	5	213	D5	D	5	245	F5	F	5
22	16	1	6		54	36	3	6	86	56	5	6	118	76	7	6	150	96	9	6	182	B6	B	6	214	D6	D	6	246	F6	F	6
23	17	1	7		55	37	3	7	87	57	5	7	119	77	7	7	151	97	9	7	183	B7	B	7	215	D7	D	7	247	F7	F	7
24	18	1	8		56	38	3	8	88	58	5	8	120	78	7	8	152	98	9	8	184	B8	B	8	216	D8	D	8	248	F8	F	8
25	19	1	9		57	39	3	9	89	59	5	9	121	79	7	9	153	99	9	9	185	B9	B	9	217	D9	D	9	249	F9	F	9
26	1A	1	A		58	3A	3	A	90	5A	5	A	122	7A	7	A	154	9A	9	A	186	BA	B	A	218	DA	D	A	250	FA	F	A
27	1B	1	B		59	3B	3	B	91	5B	5	B	123	7B	7	B	155	9B	9	B	187	BB	B	B	219	DB	D	B	251	FB	F	B
28	1C	1	C		60	3C	3	C	92	5C	5	C	124	7C	7	C	156	9C	9	C	188	BC	B	C	220	DC	D	C	252	FC	F	C
29	1D	1	D		61	3D	3	D	93	5D	5	D	125	7D	7	D	157	9D	9	D	189	BD	B	D	221	DD	D	D	253	FD	F	D
30	1E	1	E		62	3E	3	E	94	5E	5	E	126	7E	7	E	158	9E	9	E	190	BE	B	E	222	DE	D	E	254	FE	F	E
31	1F	1	F		63	3F	3	F	95	5F	5	F	127	7F	7	F	159	9F	9	F	191	BF	B	F	223	DF	D	F	255	FF	F	F

Index

A

- accessing brain over the Internet, 17
- ACT LED, 26
- address for serial brain, 47
- Allen-Bradley PLC, communicating with, 15, 20
- analog point
 - average filter weight, 30
 - clamping, 30
 - gain, 30
 - maximum value, 30
 - minimum value, 30
 - offset, 30
 - PID loop control, 30
 - ramping, 30
 - scaling, 30
 - totalizer, 30
 - TPO, 29
 - watchdog, 30
- average filter weight, 30

B

- baud rate, 8
- blink codes, 35
 - SB brain communication, 43
- brain
 - comparing features, 27
 - Ethernet networking, 23
 - FTP, 31
 - installing, 7
 - Scratch Pad, 31
 - serial networking, 8

C

- calibrating analog point, 30
- clamping analog output point, 30
- communicating

- choosing methods, 18
 - with Ethernet brain, 15
 - pinging the brain, 40
 - problems with, 39
 - simultaneously, 16
 - with serial brain, 16
 - blink codes, 43
 - troubleshooting, 42
- communication error blink codes, 43
- comparing brain features, 27
- computer, connecting directly to EB brain, 23
- computer, connecting directly to serial brain, 22
- connecting to brain
 - daisy-chaining, 24, 25
 - Ethernet network interfaces, 24
 - serial wiring diagrams, 10
 - troubleshooting EB brain, 39
 - troubleshooting SB brain, 42
- counter, description, 29

D

- daisy chain, 24, 25
- data logging, 31
- data mirroring, 31
- database connectivity, 16, 17
- default settings, restoring, 34
- digital point
 - counter, 29
 - latching, 29
 - quadrature counter, 29
 - state, 29
 - totalizer, 29
 - TPO, 29
 - watchdog, 30
- direct connection
 - Ethernet, 23
 - serial, 22
- distributed system, 19

E

- email, 31
- enterprise management system, 31
- Ethernet brain
 - communication, 15
 - troubleshooting, 39
- Ethernet network
 - accessing brain over the Internet, 17
 - architecture, 23
 - attaching brain to existing network, 23
 - certification, 42
 - daisy-chaining brains, 24
 - errors, 41
 - incorrect connections (diagram), 25
 - independent control network, 23
 - interfaces, 24, 26
 - troubleshooting, 41
- EtherNet/IP, 15
- event, 31
- event messages, 31

F

- Factory Mutual-approved brains, 1
- failsafe bootloader mode, 34, 45
- features
 - comparison of brain models, 27
 - descriptions of, 29
- file system on brain, 31
- firmware, loading, 34
- frequency measurement, 29
- FTP, 16, 31

G

- gain, definition, 30
- generating
 - pulse, 29
 - square wave, 29

H

- hardware, getting data about, 37
- help
 - blink codes, 35
 - Ethernet network problems, 41
 - LED descriptions, 26, 27
 - Product Support, 4
- high-density digital counter, 29

I

- I/O modules
 - installing, 5
 - removing, 7
- I/O point features, 29
- I/O processor
 - Ethernet brain used independently, 21
 - serial brain used independently, 22
- installing
 - brain on rack, 7
 - I/O modules, 5
 - mounting rack, 5
 - quick start, 5
- Internet, accessing brain over, 17
- IP filtering, 31
- IRQ LED, 27

L

- latch, definition, 29
- LEDs
 - blink codes, 35, 43
 - description, 26, 27
 - red, 40
- LNK LED, 26
- loop control on analog point, 30

M

- maximum value, 30
- measuring
 - frequency, 29
 - period, 29
 - pulses, 29
- memory map copying, 31
- minimum value, 30
- Modbus/TCP, 16
- mounting rack, installing, 5

N

- network
 - attaching EB brain to existing network, 23
 - certification, 42
 - daisy-chaining brains, 24
 - Ethernet errors, 41
 - Ethernet interfaces, 24, 26
 - incorrect Ethernet connections (diagram), 25
 - independent Ethernet network, 23
 - serial port, 27
 - termination, 10
 - troubleshooting Ethernet, 41

O

- off-latch, 29
- off-pulse measurement, 29
- offset, definition, 30
- off-time totalizer, 29
- on-latch, 29
- on-pulse measurement, 29
- on-time totalizer, 29
- OPC, 4, 16, 17
- Opto 22 Product Support, 4
- OptoDataLink, 4, 16, 17
- OptoOPCServer, 16, 17

P

- PAC Control, 15, 17
- PAC Manager, 3, 15, 17
- PCI-AC48 adapter card, 22
- peak, 30
- period measurement, 29
- PID loop control, 30
- ping, 40
- port access, limiting, 31
- Product Support, 4
- pulse
 - generation, 29
 - measurement, 29

Q

- quadrature counter, 29
- quick start, 5

R

- rack for I/O modules, installing, 5
- ramping analog output point, 30
- removing I/O modules, 7
- RESET button, 34, 45
- restoring default settings, 34
- retransmit timeout (RTO), 45
- RSTP, 25

S

- scaling, description, 30
- Scratch Pad areas, 31
- security, 31
- serial brain
 - addressing, 47
 - cables, 47
 - communication, 16

- installation, 8
- troubleshooting, 42
- wiring diagrams, 10
- SERIAL LED, 27
- serial network, 8
 - addressing, 47
 - port, 27
 - wiring diagrams, 10
- SMTP, 16
- SNAP PAC System illustration, 19
- SNAP-PAC-EB1, features, 27
- SNAP-PAC-EB2, features, 27
- SNAP-PAC-SB1, features, 27
- SNAP-PAC-SB2, features, 27
- SNMP, 16, 31
- square wave generation, 29
- STAT LED, 26, 27
- state of digital point, 29
- status conditions (blink codes), 35
- STP, 25
- system architecture, 23

T

- TCP/IP
 - multiple sessions, 16
 - settings, 45
 - stack, 45
- technical support, 4
- termination, 10
- termination and bias, 8
- thermocouple linearization, definition, 30
- timed event, 31
- timeout, 45
- time-proportional output, 29
- totalizer
 - analog, 30
 - digital, 29
- TPO, 29
- troubleshooting
 - blink codes, 35
 - Ethernet brain, 39
 - Ethernet network, 41
 - LED descriptions, 26, 27
 - Product Support, 4
 - serial brain, 42

V

- valley, 30

W

watchdog, definition, 30

wiring diagrams

 serial brain, 10